website:http://biz.LGservice.com
e-mail:http://www.LGEservice.com/techsup.html

LCD TV
SERVICE MANUAL

CHASSIS : ML-041B

MODEL: RZ-15LA66(RZ-15LA66 Rev A)

***( ) ID LABEL Model No.**

CAUTION
BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

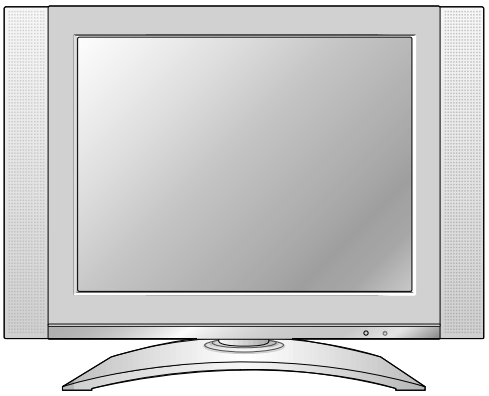

***Same looking with new chassis**

***Issue Date; 2004. 06**

CONTENTS

CONTENTS 2

PRODUCT SAFETY 3

SPECIFICATION 4

TIMING CHART.....11

ADJUSTMENT INSTRUCTION 12

TROUBLE SHOOTING 16

BLOCK DIAGRAM.....21

WIRING DIAGRAM 23

EXPLODED VIEW 24

EXPLODED VIEW PARTS LIST.....25

REPLACEMENT PARTS LIST 26

SVC. SHEET .....

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by ⚠ in the Schematic Diagram and Replacement Parts List.
It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.
Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

X-RAY Radiation

Warning:

The source of X-RAY RADIATION in this TV receiver is the High Voltage Section and the LCD PANEL.
For continued X-RAY RADIATION protection, the replacement panel must be the same type panel as specified in the Replacement Parts List.

To determine the presence of high voltage, use an accurate high impedance HV meter.

Adjust brightness, color, contrast controls to minimum.
Measure the high voltage.
The meter reading should indicate
23.5 ± 1.5KV: 14-19 inch, 26 ± 1.5KV: 19-21 inch,
29.0 ± 1.5KV: 25-29 inch, 30.0 ± 1.5KV: 32 inch
If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)
With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.
If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1MΩ and 5.2MΩ.
When the exposed metal has no return path to the chassis the reading must be infinite.
An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)
Plug the AC cord directly into the AC outlet.
Do not use a line Isolation Transformer during this check.
Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.
Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.
Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5mA.
In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

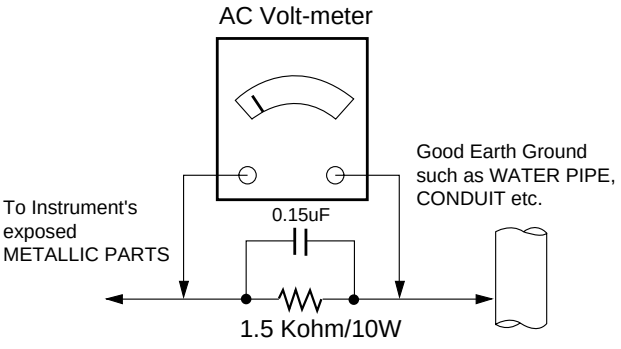

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the *SAFETY PRECAUTIONS* on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
   a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
   b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
   c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
   CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.
   Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)
   CAUTION: This is a flammable mixture.
   Unless specified otherwise in this service manual, lubrication of contacts in not required.
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
   Always remove the test receiver ground lead last.
8. *Use with this receiver only the test fixtures specified in this service manual.*
   CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices.* Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
   CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25cm) brush with a metal handle.
   Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
   a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
   b. Heat the component lead until the solder melts.
   c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
   CAUTION: Work quickly to avoid overheating the circuitboard printed foil.
6. Use the following soldering technique.
   a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
   b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
   c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
   CAUTION: Work quickly to avoid overheating the circuit board printed foil.
   d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.
   CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.
   CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to ML-041B chassis.

2. Requirement for Test

Testing for standard of each part must be followed in below condition.

(1) Temperature: 25°C ± 2°C
(2) Humidity: 65% ± 10%
(3) Power: Standard input voltage (AC 100-240V, 50/60Hz)
(4) Measurement must be performed after heat-run more than 30min.
(5) Adjusting standard for this chassis is followed a special standard.

3.General Specification

No.	Item	Specification	Remark
1	Maker	LPL	LPL
	Type	TFT Color LCD Module	
	ActiveDisplay Area	15.0 inches(380.16mm) diagonal(Aspect 4:3)	
	Pixel Pitch [mm]	0.297mm(H)x0.297mm(V)xRGB	
	Electrical Interface	LVDS	
	Color Depth	6BIT WITH FRC, 16,777,216 colors	
	Size [mm]	332.8(H)x262.2(V)x18(D)	
	Surface Treatment	Anti Glare(HAZE 3%), Hard Coating(3H)	
	Operating Mode	Normally Black,	
	Back light Unit	4 CCFL(4 lamps)	
	R/T Typ.	R.T.:10ms + F.T.:22ms (MAX)	
2	Maker	HYDIS	HYDIS
	Type	TFT Color LCD Module	
	ActiveDisplay Area	15.0 inches(380.16mm) diagona	
	Pixel Pitch [mm]	0. 0.297mm(H)x0.297mm(V)xRGB	
	Electrical Interface	LVDS	
	Color Depth	RGB 6-BIT 16,194,277Colors	
	Size [mm]	331.6(H)x254.7(V)x12.7(D)	
	Surface Treatment	HAZE25,Hard Coating, ANTI- Glare (3H)	
	Operating Mode	Normally Black	
	Back light Unit	4 CCFL(4 lamps)	
	R/T Typ.	T total(Tr+Td) = 25ms	
3	Maker	CMO	CMO
	Type	TFT Color LCD Module	
	ActiveDisplay Area	15.0 inches(380.16mm) diagona	
	Pixel Pitch [mm]	0. 0 304.1mm(H)x228.1mm(V)xRGB	
	Electrical Interface	LVDS	
	Color Depth	RGB 6-BIT 16,194,277Colors	
	Size [mm]	331.6(H)x254.6(V)x13(D)	
	Surface Treatment	Hard Coating, ANTI- Glare (3H)	
	Operating Mode	Normally WHITE	
	Back light Unit	4 CCFL(4 lamps)	
	R/T Typ.	R.T.:22ms + F.T.:38ms (MAX)	

4. Feature and Function

No.	Item	Specification	Remark
1	Teletext	TOP, FLOF,LIST 10 page	Top(option)
2	REMOCON	NEC Code	PAL/ NTSC
3	AV Input	2	Rear(option, NT),
4	S-Vedio Input	1	Rear
5	Component input	1	Rear (option, NT)
6	PERI TV Connector	Full SCART : 1	Rear (option,EU)
7	RGB(VGA)Input	1	D-sub 15 pin
8	H/p input	1	
9	PC Sound input	1	
10	RS-232	YES	Rear(Option. Commercial)
11	Discrete IR	NO	
12	2 Carrier Stereo	BG, DK	
13	NICAM Stereo	BG, I, LL'	
14	2 Carrier Dual	BG, DK	
15	NICAM Dual	BG, I, LL'	
16	DW(Double Window) Mode	X	
17	MW(Multi Window) Mode	X	
18	Film Mode	O	
19	Noise Reduction	X	
20	Progressive Scan	O	
21	Motion Detection	X	
22	SRS WOW	X	
23	wivel Speaker	X	
24	Ez-pip	X	
25	ARC	X	
26	DRP	O	
27	DCDI	X	
28	HDCP	X	

5.Optical Character

No.	Item	Specification						Remark
					LPL	HYDIS	AUO	
1	Viewing Angle <CR≥10>	R/L, U/D				80/65 80/65	60/60 40/60	
2	Luminance	Luminance(cd/㎡)			450	500	500	Typical
		Variation			1.3	1.33		MAX/MIN
3	Contrast Ratio				400		300	ALL white/All back
4	CIE Color Coordinates	WHITE	W_X	Typ.	0.289	0.265	0.314	Min =Typ.-0.03
			W_Y	Typ.	0.304	0.293	0.344	Max =Typ.+0.03
		RED	W_r	Typ.	0.619	0.629	0.632	
			Y_r	Typ.	0.343	0.340	0.361	
		Green	X_g	Typ.	0.298	0.255	0.295	
			Y_g	Typ.	0.578	0.601	0.598	
		Blue	Xb	Typ.	0.289	0.141	0.142	
			Yb	Typ.	0.304	0.071	0.102	

6.Engineering Specification

6-1.General Specification(TV)

No.	Item	Specification	Remark
1	Video input applicable system	1)PAL-D/K,B/G,I 2)NTSC-M 3)SECAM NTSC 4.43'	
2	Receivable broadcasting system	1)PAL/SECAM BG 2)PAL/SECAM DK 3)PAL I/I 4)SECAM L/L' 5)NTSC M	EU/Non-EU(RZ/RT) (PAL Market)
		6)PAL-N/M 7)NTSC M	7)NTSC Area(RM)
3	RF input channel	VHF : E2 ~ E12 UHF : E21 ~ E69 CATV : S1 ~ S20 HYPER : S21 ~ S41	PAL
		L/L' : B,C,D	FRANCE
		VHF : 2 ~ 13 UHF : 14 ~ 69 CATV : 1 ~ 125	NTSC
		VHF Low : 1~M10 VHF High : 4~S22 UHF : S23~62	JAPAN
4	Input voltage	AC 100 - 240V/ 50Hz,60HZ	
5	Tuning system	FVS 100 program FS	PAL, 200PR.(Option) NTSC
6	Operting environment	1)Temp : 0 ~ 40 deg 2)Humidity : 85%	
7	Storage environment	3)Temp : -20 ~ 60 deg 4)Humidity : 85%	

No.	Item	Specification			Remark
1	Power Supply	H/V Sync	Video	Power Consumption	LED Color
	Normal	On/On	Active	≤ 55W	GREEN
	Stand By Suspend Mode DPM Off Mode	Off/On On/Off Off/Off	Off	≤ 1W ≤ 1W ≤ 1W	RED
	Cut-off Switch off	-	-	0W	OFF
				PBP SWAP ▶ ON/OFF	
	ITEM	Spectification			Remark
2	D-SUB Pin Configuraion	1: RED 3: Blue: 5: S.T(GND) 7: Green GND 9: N.C 11: ID0(GND) 13: H-Sync 15: SCL	2: Green 4: ID2(GND) 6: RED GND 8: Blue GND 10: D-GND 12: SDA 14: V-Sync Shell: GND		10: Digital GND
3	Control Function	1) Contrast/Brightness 2) H-Position/V-Position 3) Tracking : Clock/ Phase 4) Auto Configure RESET			
4	Y, Pb, Pr				Middle east/ NTSC Area
5	D4 Jack (525i, 525p, 750p, 1125i)	1: Y 3: Pb 5: Pr 7: Line1 Ready 9: LINE2 11: LINE3 5) 13: Line3 Ready	2: Y GND 4: Pb GND 6: Pr GND 8: LINE1 10: Line2 Ready 12: SWITCH GND 6) 14: SWITCH		JAPAN Only

6-2.Power

NO	Item	Min	Typ	Max	Unit	Remark
1	AC Power Shut Down Voltage	90		264	V	
2	DC Voltage, Inverter	22.8	24	25.2	V	
3	DC Voltage, LCD Panel	11.4	12	12.6	V	
4	DC Voltage, Audio	14.0	15	16.0	V	
5	DC Voltage, Tuner(5)	4.5	5	5.5	V	
	DC Voltage, Tuner(9)	8.5	9	9.5	V	
6	DC Voltage, Tuning(31)	31	33	35	V	Japan only
7	DC Voltage, VCTi(5)	4.5	5	5.5	V	
	DC Voltage, VCTi(8)	7.5	8	8.5	V	
8	DC Voltage, VCTi(3.3)	3.1	3.3	3.5	V	
	DC Voltage, VCTi(1.8)	1.6	1.8	2.0	V	
9	DC Voltage, GM2221 (3.3)	3.1	3.3	3.5	V	
	DC Voltage, GM2221 (1.8)	1.6	1.8	2.0	V	
10	DC Voltage, Digital (3.3)	2.8	3.3	3.8	V	
11	DC Voltage, Digital (5)	4.5	5	5.5	V	

6-3. Power

NO	Item	Min	Typ	Max	Unit	Remark
1.	Video Input Level	0.85	1	1.15	Vpp	EN-50049
2.	Audio Input Level	0.4	0.5	0.6	V	NTSC:0.4Vrms(Typ)
3.	Audio Input Frequency Response	0.1		7	KHz	
4.	Audio Input S/N	40			DB	
5.	Audio Input Distortion			2	%	
6.	Audio Input Dynamic Range	2			V	
7.	Video Output Level	0.85	1	1.15	Vpp	
8.	Video Output Frequency Response	3.8			MHz	
9.	Video Output S/N	40			DB	
10.	Audio Output Level	0.4	0.5	0.6	V	
11.	Audio Output Frequency Response	0.1		7	KHz	
12.	Audio Output S/N	40			DB	
13.	Audio Output Distortion			2	%	
14.	Video Input Level, R/G/B	0.6	0.7	0.8	Vpp	75 ohm
15.	Video Input Level, Component(Y, PB, PR)	0.6	0.7	0.8	Vpp	75 ohm
16.	RGB Input Resolution, Vertical		768		Pixel	Only 20" 640 Pixel
17.	RGB Input Resolution, Horizontal		1280		Pixel	480
18.	RGB Input Horizontal Frequency				KHz	See table 5-5
19.	RGB Input Frame Rate				Hz	See table 5-5

6-4. The Others

NO	Item	Min	Typ	Max	Unit	Remark
1	Search Sensitivity			-85	dBm	
2	Soft Ware Functionality Test					LGE Specification
3	REMOCON Working Sensitivity, Straight	0.1		10	m	
4	REMOCON Working Sensitivity, T/B/L/R	0.1		9	m	30 degree
5	Closed Caption Sensitivity			-70	dBm	NTSC ONLY
6	Teletext Sensitivity			-70	dBm	

7. Signal Timing(Resolution)

7-1. PC Mode

[Table 7] Timming chart of Receivable Mode * H [dot] / V [line]

Mode	VGA-60	VGA-67	VGA-75	SVGA-56	SVGA-60	SVGA-72	SVGA-75	XGA-70	XGA-75	XGA-60 X
H_display	640	640	640	800	800	800	800	1024	1024	1024
V_display	480	480	480	600	600	600	600	768	768	768
V frequency	60	67	75	56	60	72	75	70	75	60
H_total	800	864	840	1024	1056	1040	1056	1328	1312	1344
H_blanking	160	224	200	224	256	240	256	304	288	304
H_sync	96	64	64	72	128	120	80	136	96	136
H Polarity	NEG.	NEG.	NEG	POS	POS	POS	POS	NEG	POS	NEG
H_bp	48	96	120	128	88	64	160	144	176	136
H_fp	16	64	16	24	40	56	16	24	16	160
H-freq[kHz]	31.469	35.0	37.5	35.156	37.879	48.077	46.875	56.476	60.023	48.3
/Clk[MHz]	25.175	30.24	31.5	36.0	40.0	50.0	49.5	75.0	78.75	65
V_total	525	525	500	625	628	666	625	806	800	806
V_blanking	45	45	20	25	28	66	25	38	32	38
V_sync	2	3	3	2	4	6	3	6	3	6
V Polarity	NEG	NEG	NEG	POS	POS	POS	POS	NEG	POS	NEG
V_bp	33	39	16	22	23	23	21	29	28	29
V_fp	10	3	1	1	1	37	1	3	1	3

TIMING CHART

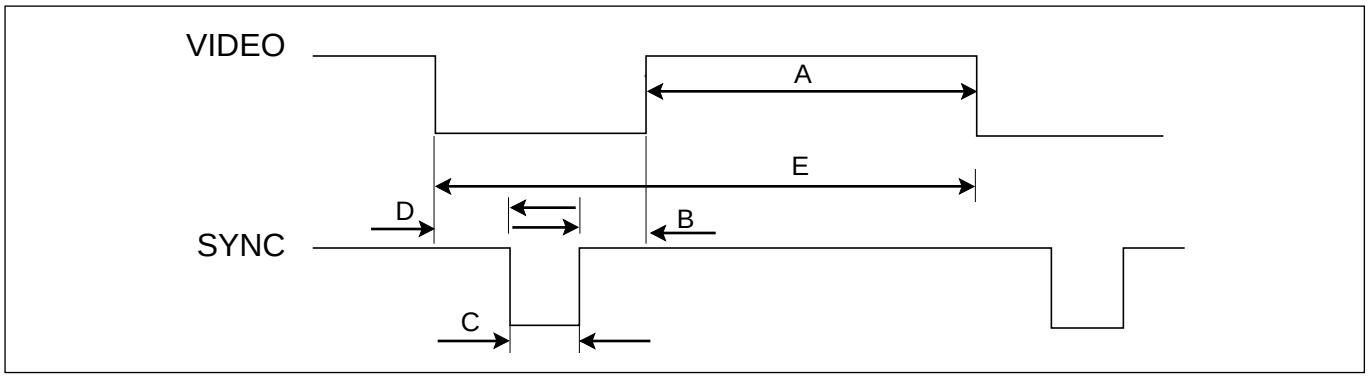

<< Dot Clock **(MHz),** Horizontal Frequency **(kHz)**, Vertical Frequency **(Hz)**, Horizontal etc... **(μs)**, Vertical etc... **(ms) >>**

Mode	H/V Sort	Sync Polarity	Dot Clock	Frequency	Total Period (E)	Video Active Time (A)	Front Porch (B)	Sync Duration (D)	Back Porch (F)	Resolution
1	H	+	25.175	31.468	800	640	16	96	48	**640x350**
	V	–		70.090	449	350	37	2	60	
2	H	–	28.324	31.469	900	720	18	108	54	**720x400**
	V	+		70.082	449	400	13	2	34	
3	H	–	25.175	31.469	800	640	16	96	48	**640x480**
	V	–		59.94	525	480	10	2	33	
4	H	–	31.5	37.5	840	640	16	64	120	**800x600**
	V	–		75	500	480	1	3	16	
5	H	+	40.0	37.879	1056	800	40	128	88	**800x600**
	V	+		60.317	628	600	1	4	23	
6	H	+	49.5	46.875	1056	800	16	80	160	**800x600**
	V	+		75.0	625	600	1	3	21	
7	H	–	65.0	48.363	1344	1024	24	136	160	**1024x768**
	V	–		60.004	806	768	3	6	21	

ADJUSTMENT INSTRUCTION

1. Application Object

This instruction is for the application to the LCD TV.

2. Adjustment

2.1 Adjustment overview

The unit is set to automatically adjust using the factory automation equipment. However when errors occur, it should be adjusted manually.

2.2 Auto Gain/Offset adjustment

2.2.1 RF Mode adjustment

2.2.1.1 Adjustment preparation

■Conduct Heat Run at the RF fog signals for more than 30 minutes.

2.2.1.2 Auto Gain/Offset adjustment

■Press IN-START Key to convert to the adjustment mode using the adjustment (SVC) remote controller, and press VOL+ Key at the Auto Gain menu.

■ Once the adjustment is completed, press the Enter Key to save and finish the adjustment.

2.2.3 PC Mode adjustment

2.2.3.1 Adjustment preparation

■Conduct Heat Run at the RF fog signals for more than 30 minutes.

■Connect the Pattern Generator to 15 Pin D-Sub Jack of LCD TV.

2.2.3.2 Auto Gain/Offset adjustment

■ Convert the input mode to PC input.

■ Using the Pattern Generator (801GF, VG819) adjust XGA (1024 X 768) for resolution and 16 Step Gray signals for the pattern. Or adjust the 16 Step (11 Step) Gray signals in accordance with VG819.

■ Convert the input mode to PC input and convert to the adjustment mode using the adjustment (SVC) remote controller and pressing the IN-START Key, and then press VOL+ Key at the AutoGain menu.

■ Once the adjustment is completed, press the Enter Key to save and finish the adjustment.

2.3 EDID (The Extended Display Identification Data) setting

■ Connect the 15 Pin D-Sub Cable to D-Sub Jack.

■ Set the input mode of Set to PC.

■ Connect the DDC automation equipment to write DDC data.

2.3.1 EDID DATA

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	39	75	01	01	01	01
10	03	0E	01	00	28	1E	17	78	EA	B1	45	A1	58	4F	95	26
20	1D	50	54	AB	8C	00	31	4F	45	4F	61	4F	01	01	01	01
30	01	01	01	01	01	01	64	19	00	40	41	00	26	30	18	88
40	36	00	30	E4	10	00	00	18	00	00	00	FD	00	38	4B	1E
50	3F	08	00	0A	20	20	20	20	20	20	00	00	00	FC	00	52
60	5A	31	35	4C	41	36	36	0A	20	20	20	20	00	00	00	FC
70	00	20	20	20	20	20	20	20	20	20	20	20	20	20	00	F7

*Option(PAL)

NO	ITEM	CONDITION	REMARK
Option 1			
1	Side AV	1	0: Side AV Off 1: Side AV On
2	SCART	1	0: SCART Off 1: SCART On
3	PC	1	0: PC Off 1: PC On
4	SideComp	1	0: SideComp Off 1: SideComp On
5	16:9	1	0: Wide Off 1: Wide On
6	200PR	0	0: 100 Program 1: 200 Program
7	Text	1	0: Text Off 1: Text On
8	ACMS	1	0: ACMS On 1: ACMS Off
Option 2			
1	HiDev	0	0: HiDev Off 1: HiDev On
2	Hotel	0	0: Hotel Off 1: Hotel On
3	Top	1	0: Top Off 1: Top On
4	I II SAVE	1	0: Ch. Sound Non Memory 1: Ch. Sound Memory
5	Turbo Vol	0	0: except below area(Off) 1: Middle-east Area Vol On
6	Ch/Aus	0	0: except below area(Off) 1: China, Australia On

NO	ITEM	CONDITION	REMARK
Option 3			
1	Language	1	0: Eng Only 1: EU5 2: 12 nations(Europe) 3: Eng + Chines 4: Eng + France Arab 5: Eng + FARSI
2	Txt Lang	0	0: WEST EU 1: EAST EU 1 2: TURKY EU 3: EAST EU 2 4: CYRILLIC 1 5: CYRILLIC 2 6: CYRILLIC 3 7: TURKY GRE 1 8: TURKY GRE 2 9: TURKY GRE 3 10: ARAB FRAN 11: ARAB ENG 12: ARAB HEB 1 13: ARAB HEB 2 14: FARSI ENG 15: FARSI FRA 16: FARI ALL
3	Inch opt	0	reserved

EDID ADJUSTMENT

Windows EDID V1.0 User Manual

Operating System: MS Windows 98, 2000, XP
Port Setup: Windows 98 => Don't need setup
Windows 2000, XP => Need to Port Setup.
This program is available to LCD Monitor only.

1. Port Setup
   a) Copy "UserPort.sys" file to
   "c:\WINNT\system32\drivers" folder
   b) Run Userport.exe

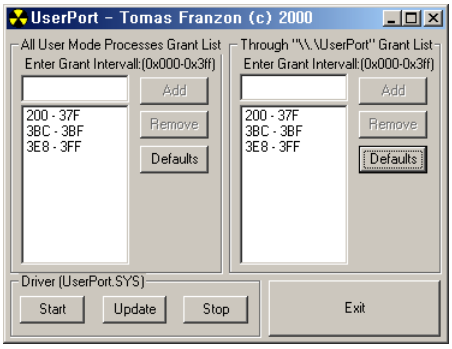

   c) Remove all default number
   d) Add 300-3FF

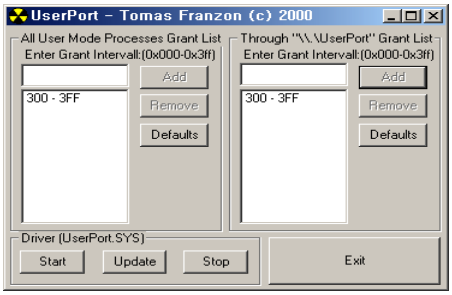

   e) Click Start button.
   f) Click Exit button.

2. EDID Read & Write
   1) Run WinEDID.exe

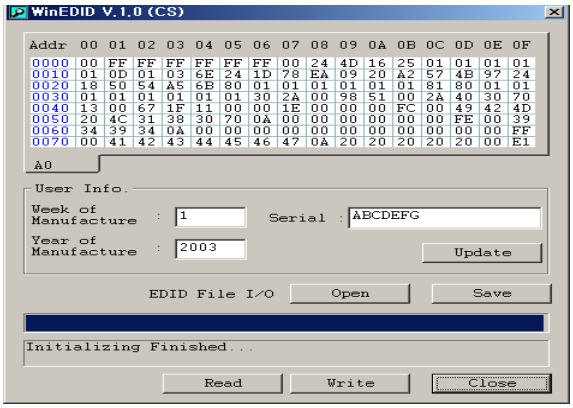

   2) Edit Week of Manufacture, Year of Manufacture, Serial Number
      a) Input User Info Data
      b) Click "Update" button
      c) Click " Write" button

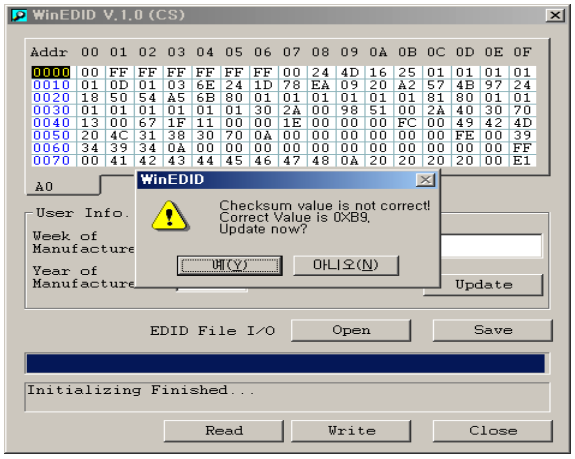

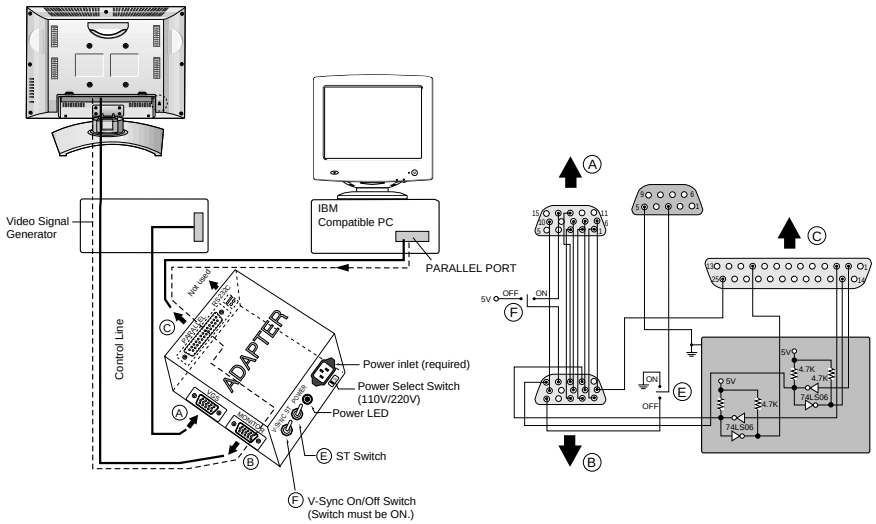

Figure 1. Cable Connection

SVC REMOCON

NO	KEY	FUNTION	REAMARK
1	POWER	To turn the TV on or off	
2	POWER ON	To turn the TV on automatically if the power is supplied to the TV. (Use the POWER key to deactivate): It should be deactivated when delivered.	
3	MUTE	To activate the mute function.	
4	P-CHECK	To check TV screen image easily.	Shortcut keys
5	S-CHECK	To check TV screen sound easily	Shortcut keys
6	ARC	To select size of the main screen (Normal, Spectacle, Wide or Zoom)	Shortcut keys
7	CAPTION	Switch to closed caption broadcasting	
8	TXT	To toggle on/off the teletext mode	
9	TV/AV	To select an external input for the TV screen	
10	TURBO SOUND	To start turbo sound	
11	TURBO PICTURE	To start turbo picture	
12	IN-START	To enter adjustment mode when manufacturing the TV sets.	Use the AV key to enter the screen W/B adjustment mode.
		To adjust the screen voltage (automatic): In-start →mute →Adjust →AV(Enter into W/B adjustment mode)	
		W/B adjustment (automatic): After adjusting the screen →W/B adjustment →Exit two times (Adjustment completed)	
13	ADJ	To enter into the adjustment mode. To adjust horizontal line and sub-brightness.	
14	MPX	To select the multiple sound mode (Mono, Stereo or Foreign language)	
15	EXIT	To release the adjustment mode	
16	APC(PSM)	To easily adjust the screen according to surrounding brightness	
17	ASC(SSM)	To easily adjust sound according to the program type	
18	MULTIMIDIA	To check component input	Shortcut keys
19	FRONT-AV	To check the front AV	Shortcut keys
20	CH±	To move channel up/down or to select a function displayed on the screen.	
21	VOL±	To adjust the volume or accurately control a specific function.	
22	ENTER	To set a specific function or complete setting.	
23	PIP CH-(OP1)	To move the channel down in the PIP screen. To use as a red key in the teletext mode	
24	PIP CH+(OP2)	To move the channel in the PIP screen To use as a green key in the teletext mode	
25	PIP SWAP(OP3)	To switch between the main and sub screens To use as a yellow key in the teletext mode	
26	PIP INPUT(OP4)	To select the input status in the PIP screen To use as a blue key in the teletext mode	
27	EYE	To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed.	
28	MENU	To select the functions such as video, voice, function or channel.	
29	IN-STOP	To set the delivery condition status after manufacturing the TV set.	
30	STILL	To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.)	
31	TIME	Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode	
32	SIZE	Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode	
33	MULTI PIP	Used as the index key in the teletext mode (Top index will be displayed if it is the top text.)	
34	POSITION	To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.)	
35	MODE	Used as Mode in the teletext mode	
36	PIP	To select the simultaneous screen	
37	TILT	To adjust screen tilt	Shortcut keys
38	0~9	To manually select the channel.	

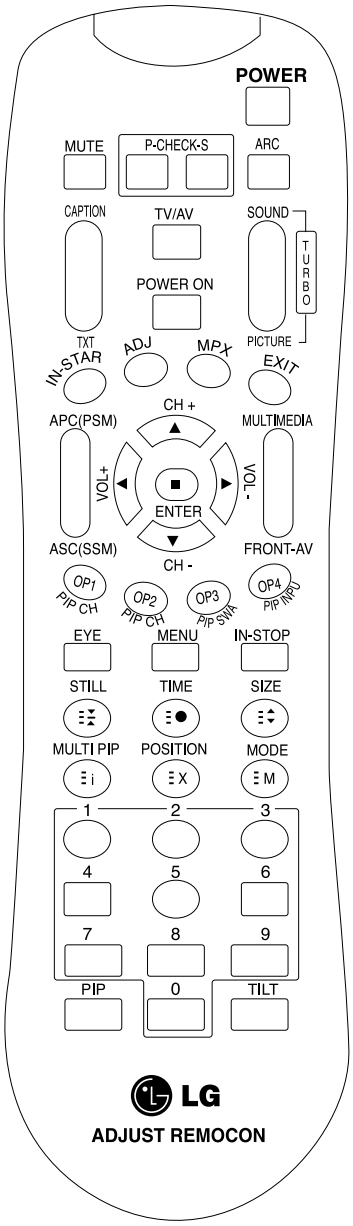

TROUBLESHOOTING

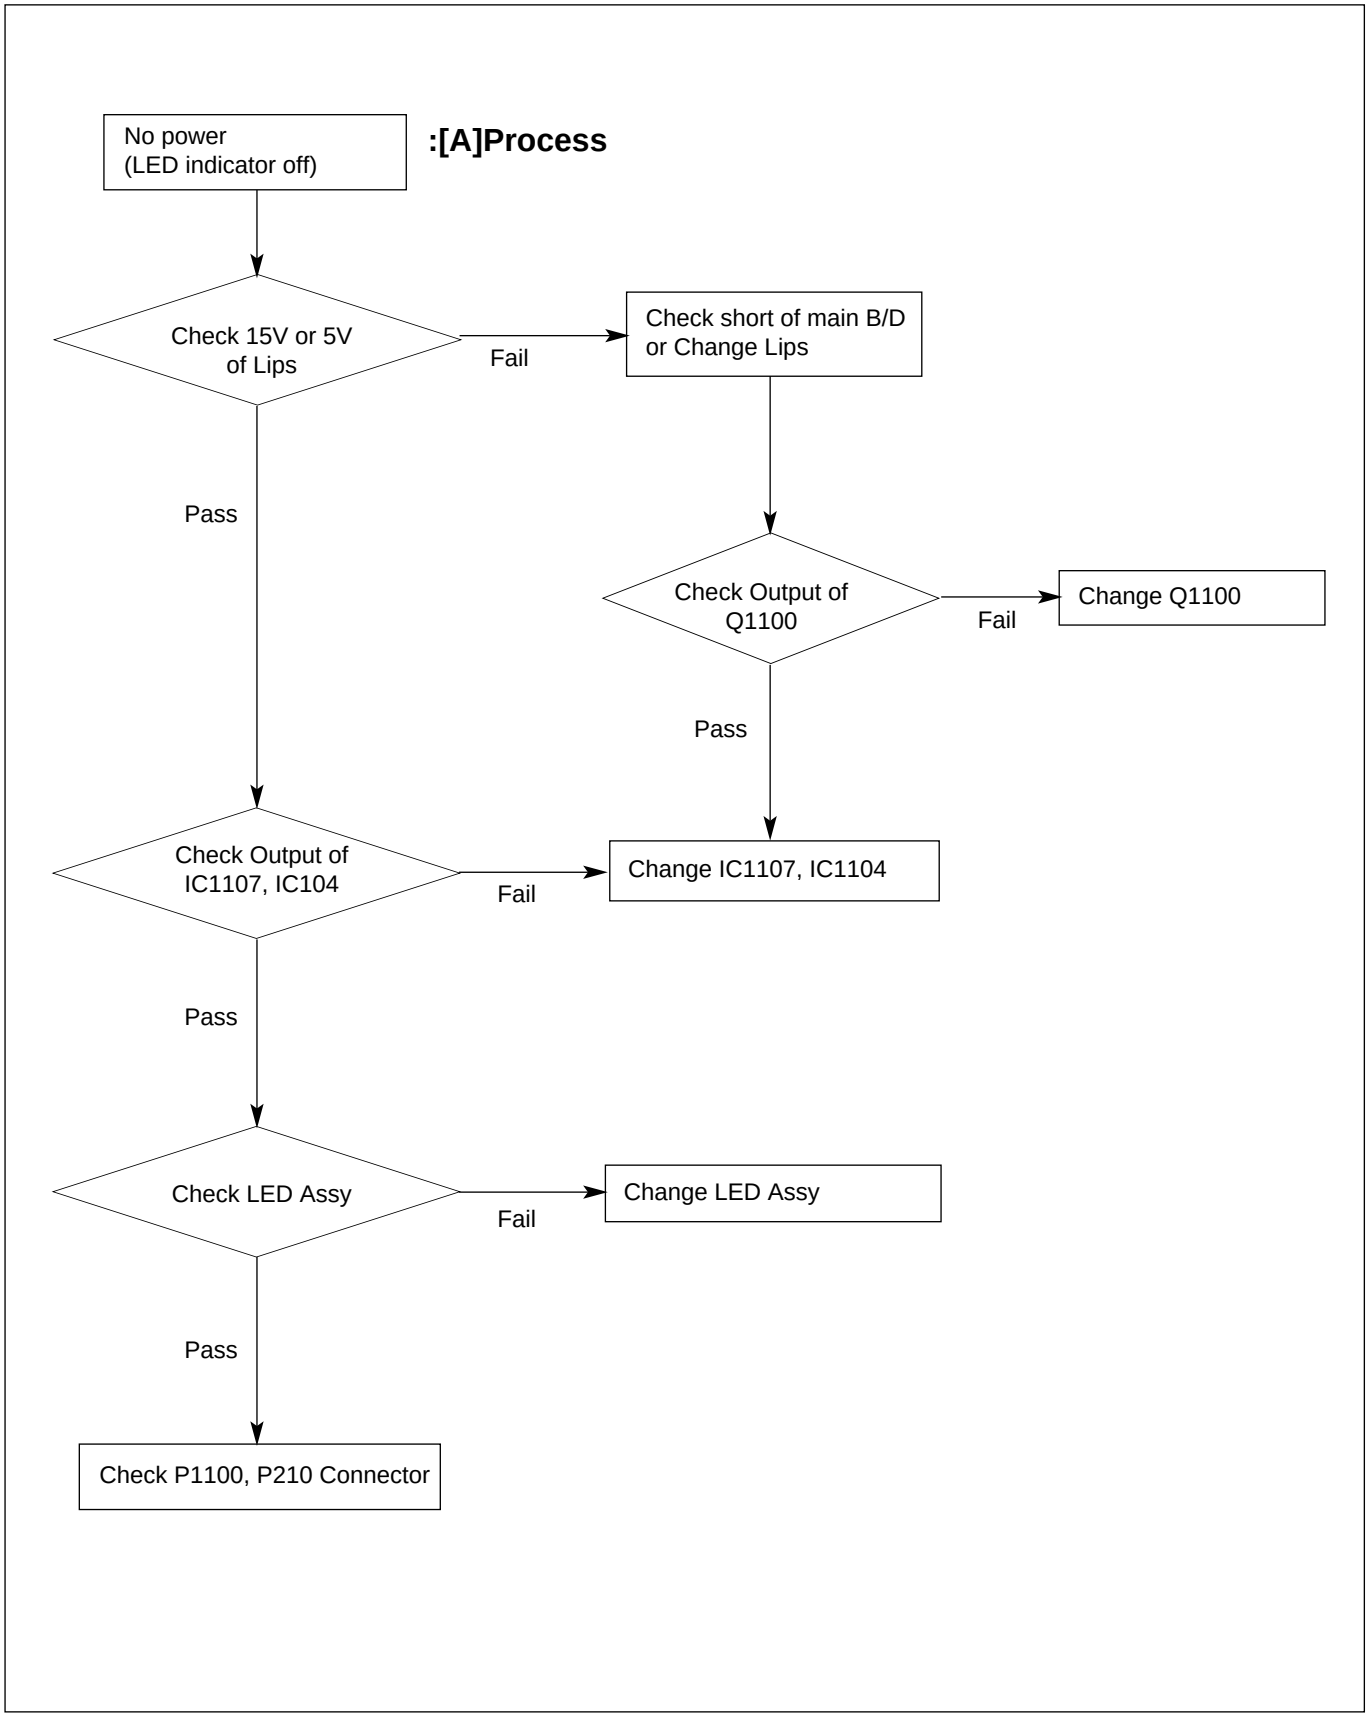

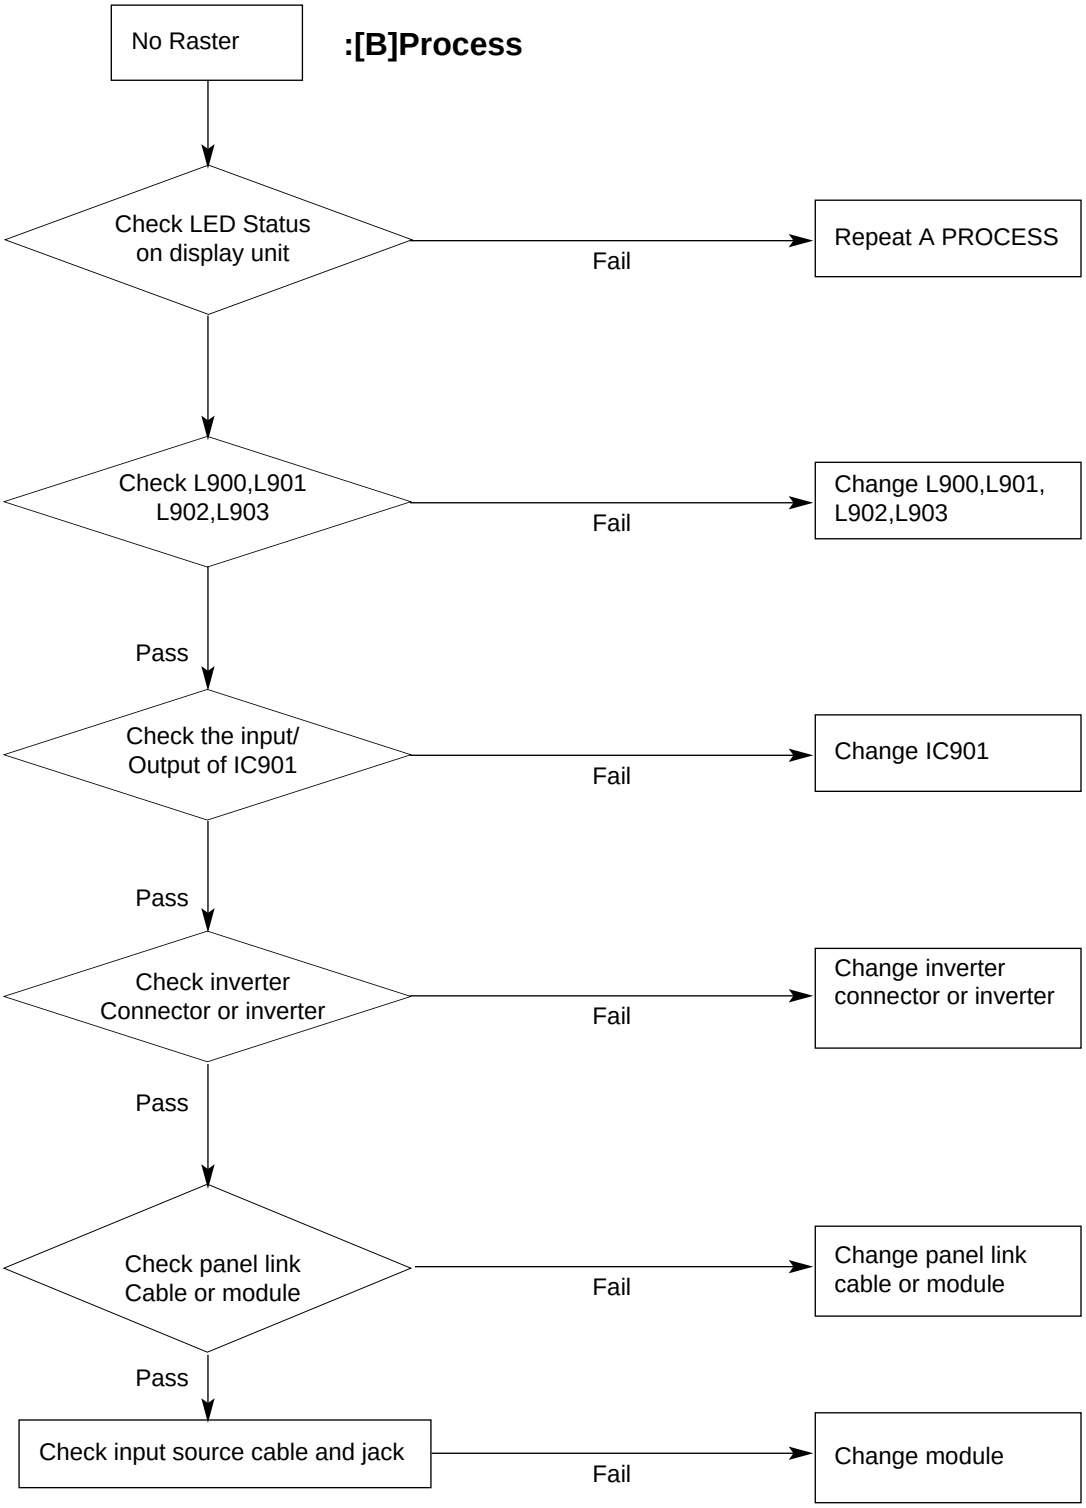
No Raster
:[B]Process
Check LED Status on display unit
Fail
Repeat A PROCESS
Check L900,L901 L902,L903
Fail
Change L900,L901, L902,L903
Pass
Check the input/ Output of IC901
Fail
Change IC901
Pass
Check inverter Connector or inverter
Fail
Change inverter connector or inverter
Pass
Check panel link Cable or module
Fail
Change panel link cable or module
Pass
Check input source cable and jack
Fail
Change module

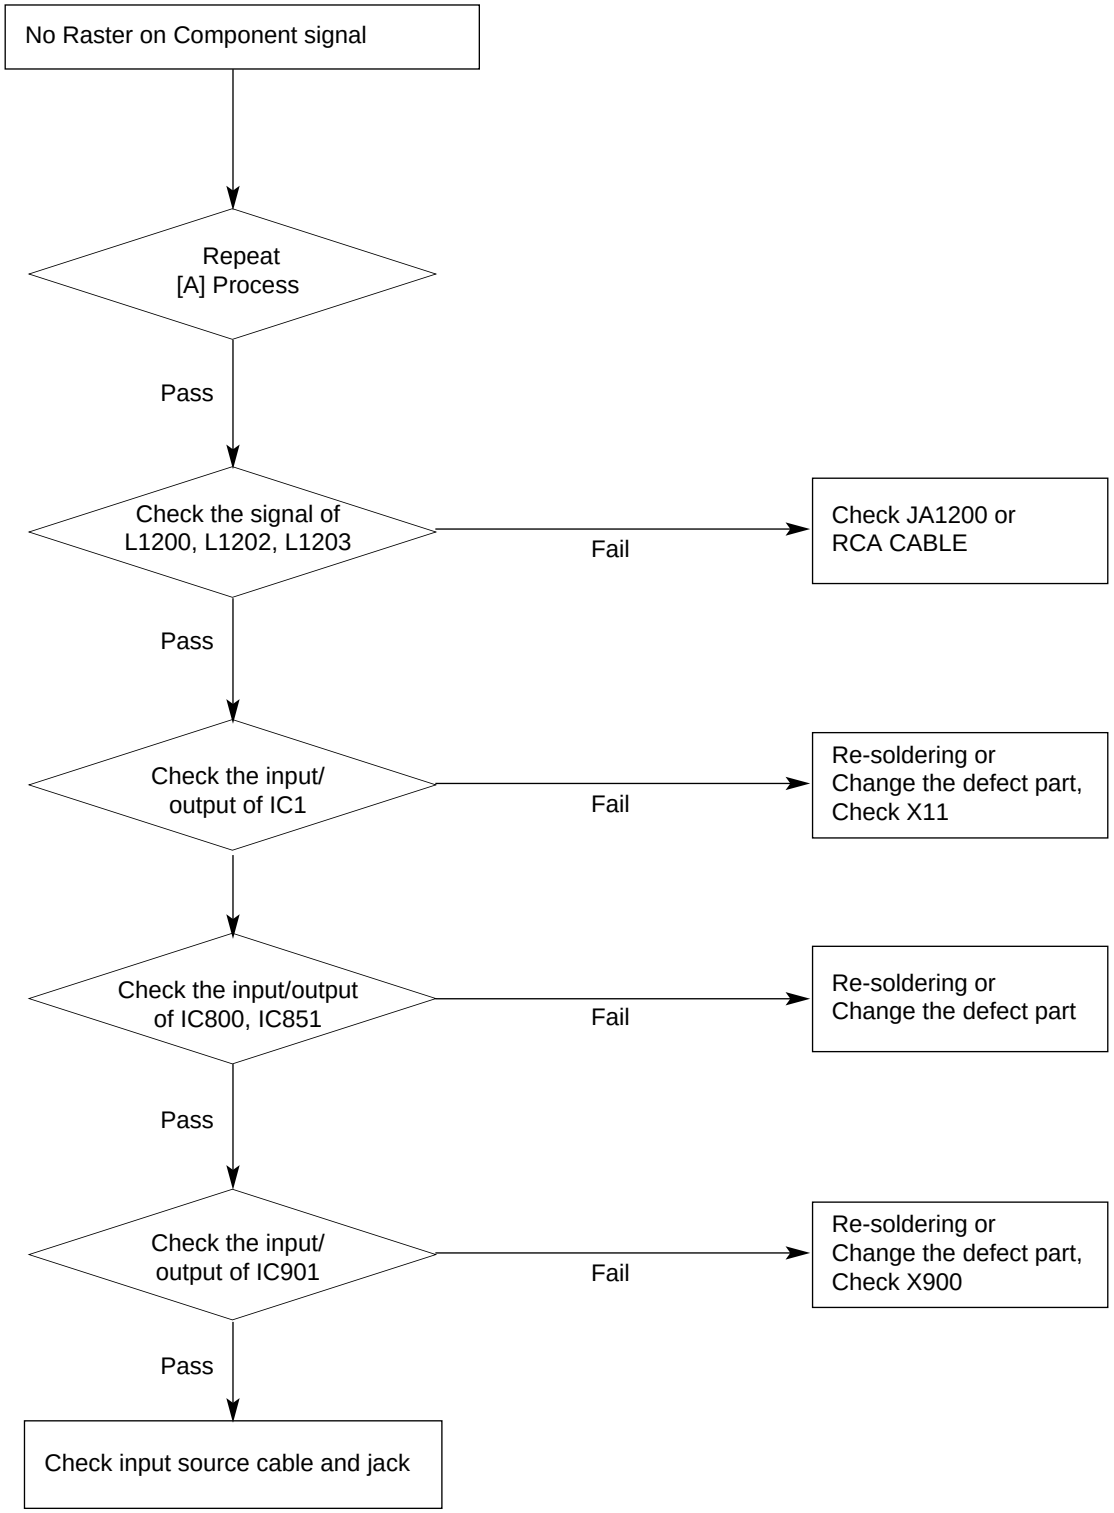
No Raster on Component signal
Repeat
[A] Process
Pass
Check the signal of
L1200, L1202, L1203
Fail
Check JA1200 or
RCA CABLE
Pass
Check the input/
output of IC1
Fail
Re-soldering or
Change the defect part,
Check X11
Check the input/output
of IC800, IC851
Fail
Re-soldering or
Change the defect part
Pass
Check the input/
output of IC901
Fail
Re-soldering or
Change the defect part,
Check X900
Pass
Check input source cable and jack

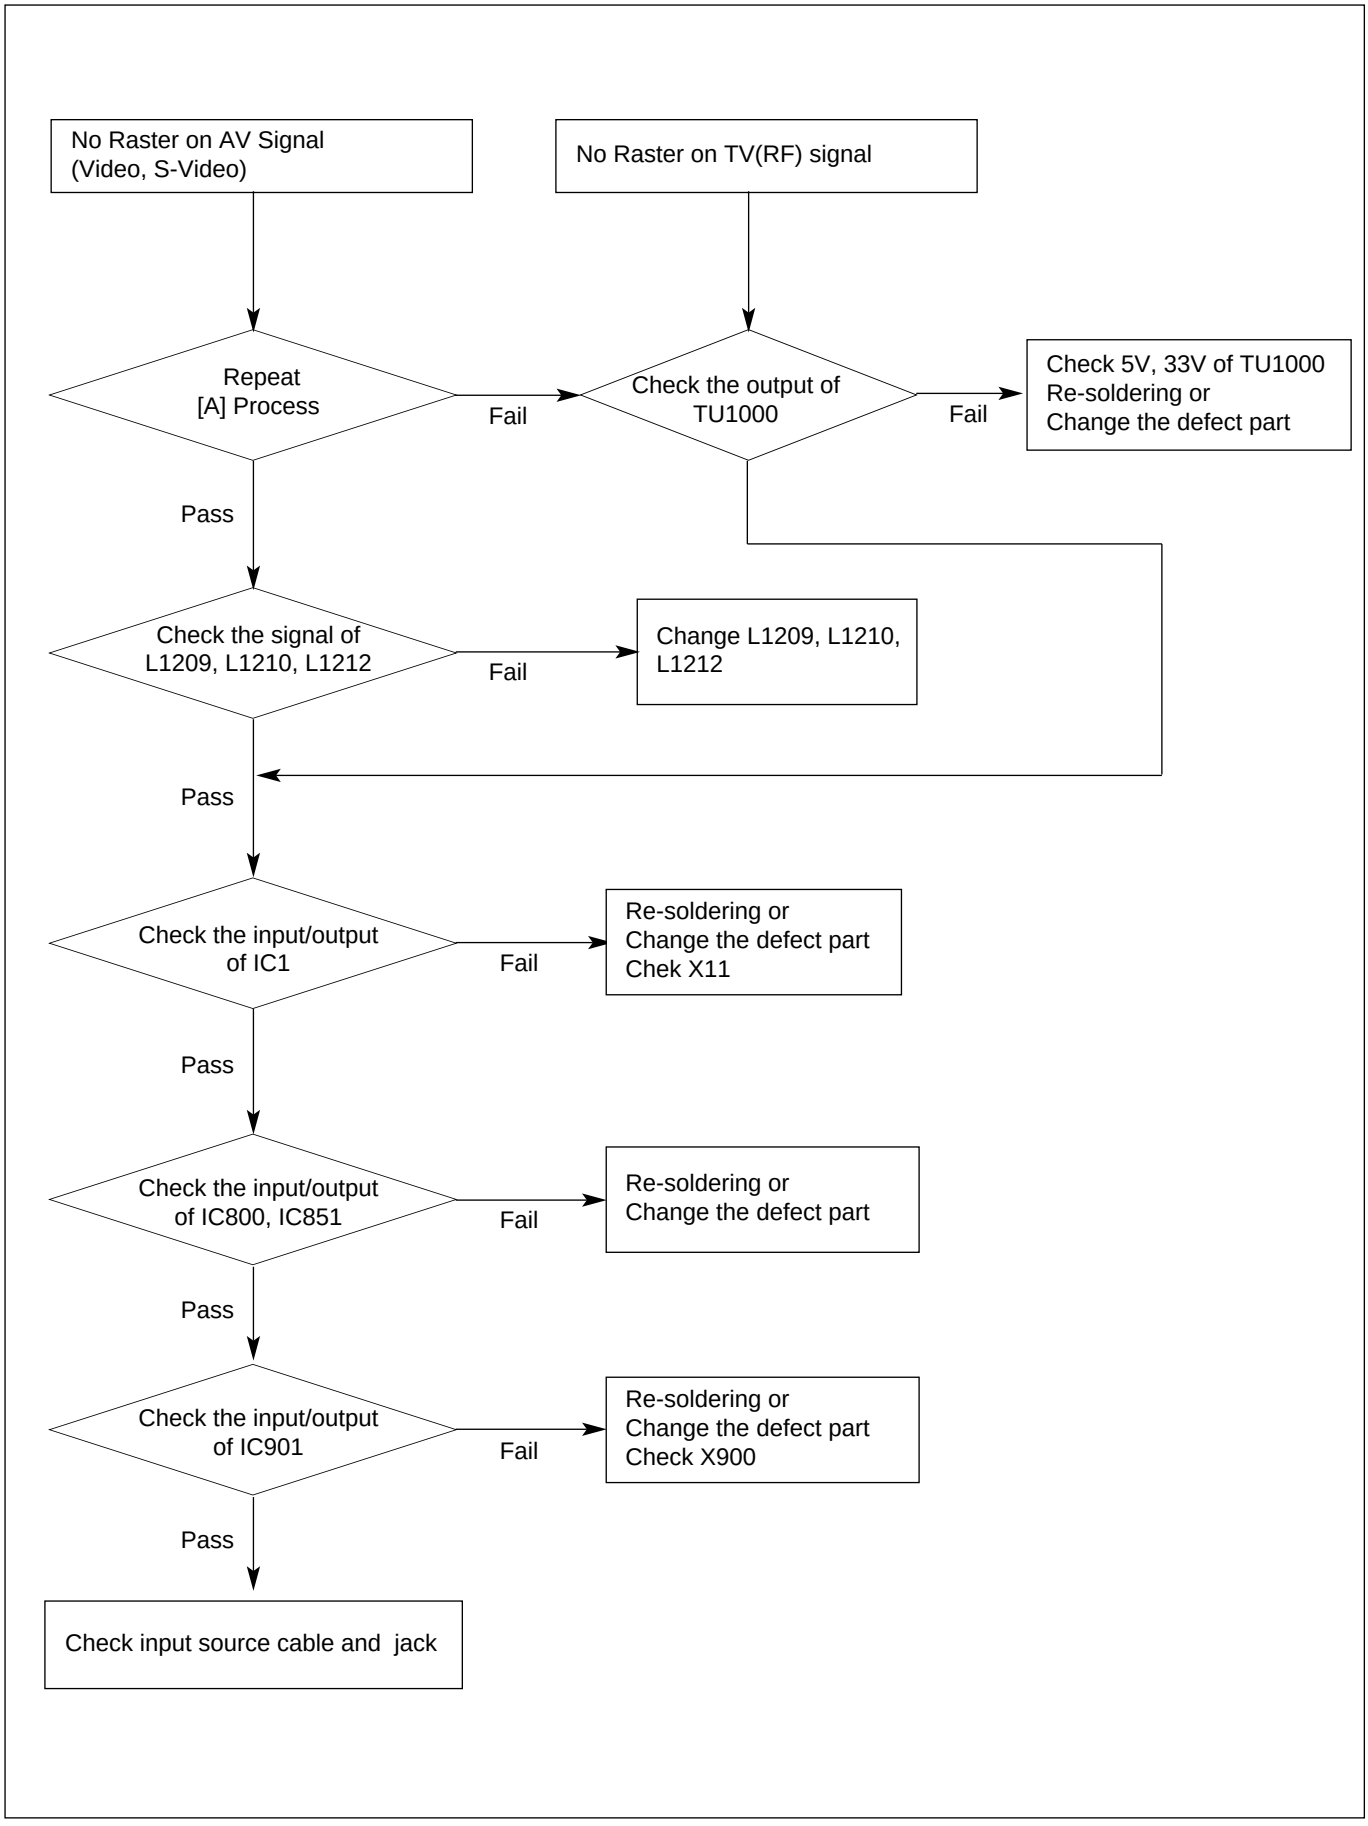
No Raster on AV Signal
(Video, S-Video)
No Raster on TV(RF) signal
Repeat
[A] Process
Fail
Check the output of
TU1000
Fail
Check 5V, 33V of TU1000
Re-soldering or
Change the defect part
Pass
Check the signal of
L1209, L1210, L1212
Fail
Change L1209, L1210,
L1212
Pass
Check the input/output
of IC1
Fail
Re-soldering or
Change the defect part
Chek X11
Pass
Check the input/output
of IC800, IC851
Fail
Re-soldering or
Change the defect part
Pass
Check the input/output
of IC901
Fail
Re-soldering or
Change the defect part
Check X900
Pass
Check input source cable and jack

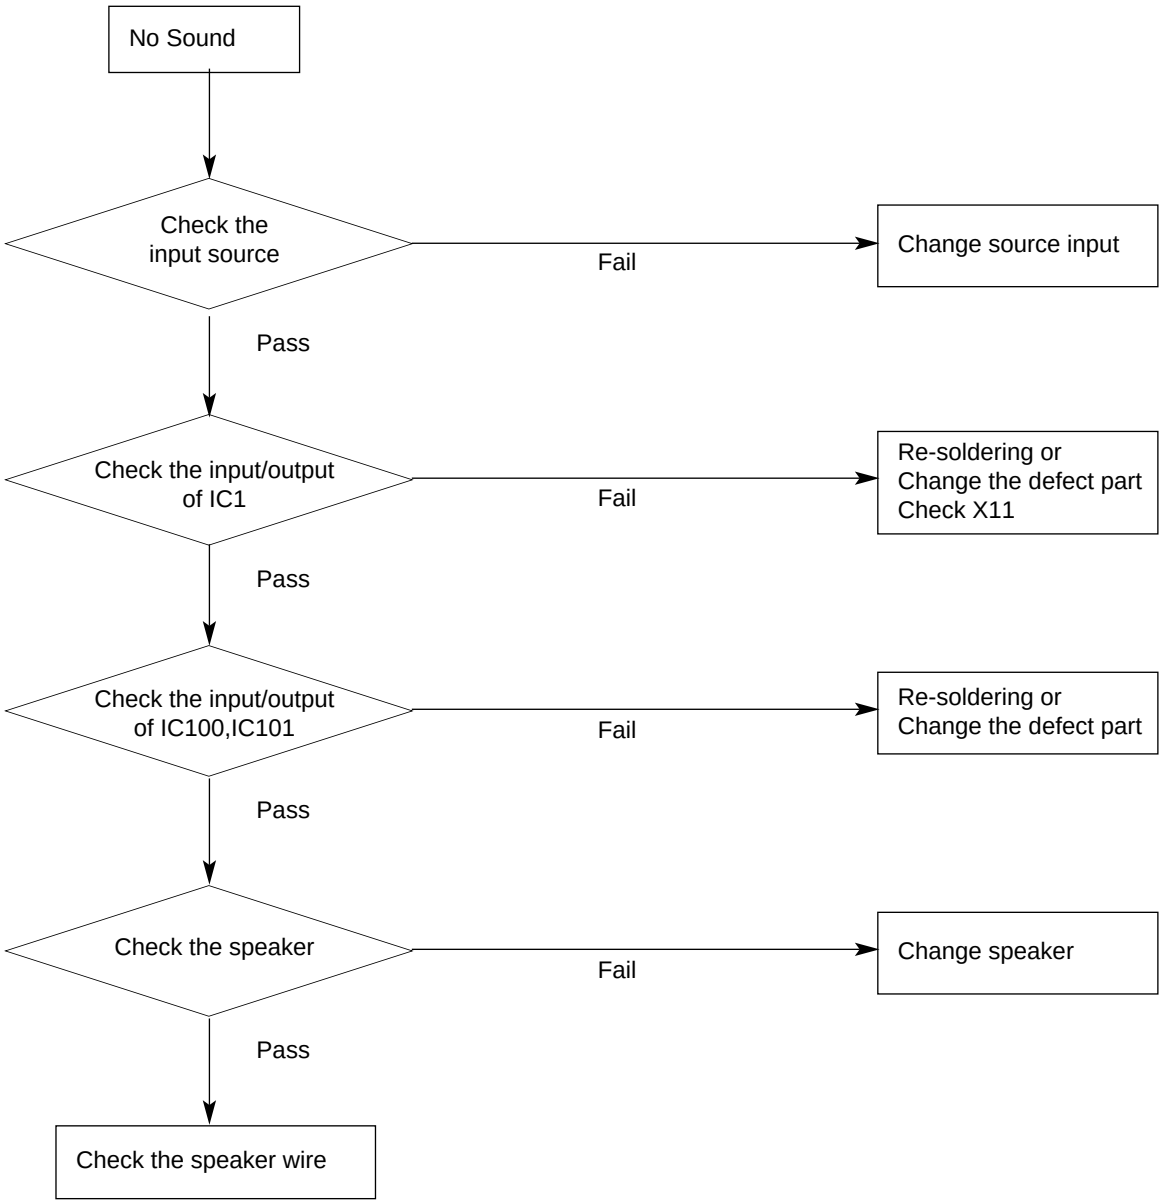
No Sound
Check the input source
Fail
Change source input
Pass
Check the input/output of IC1
Fail
Re-soldering or Change the defect part Check X11
Pass
Check the input/output of IC100,IC101
Fail
Re-soldering or Change the defect part
Pass
Check the speaker
Fail
Change speaker
Pass
Check the speaker wire

BLOCK DIAGRAM

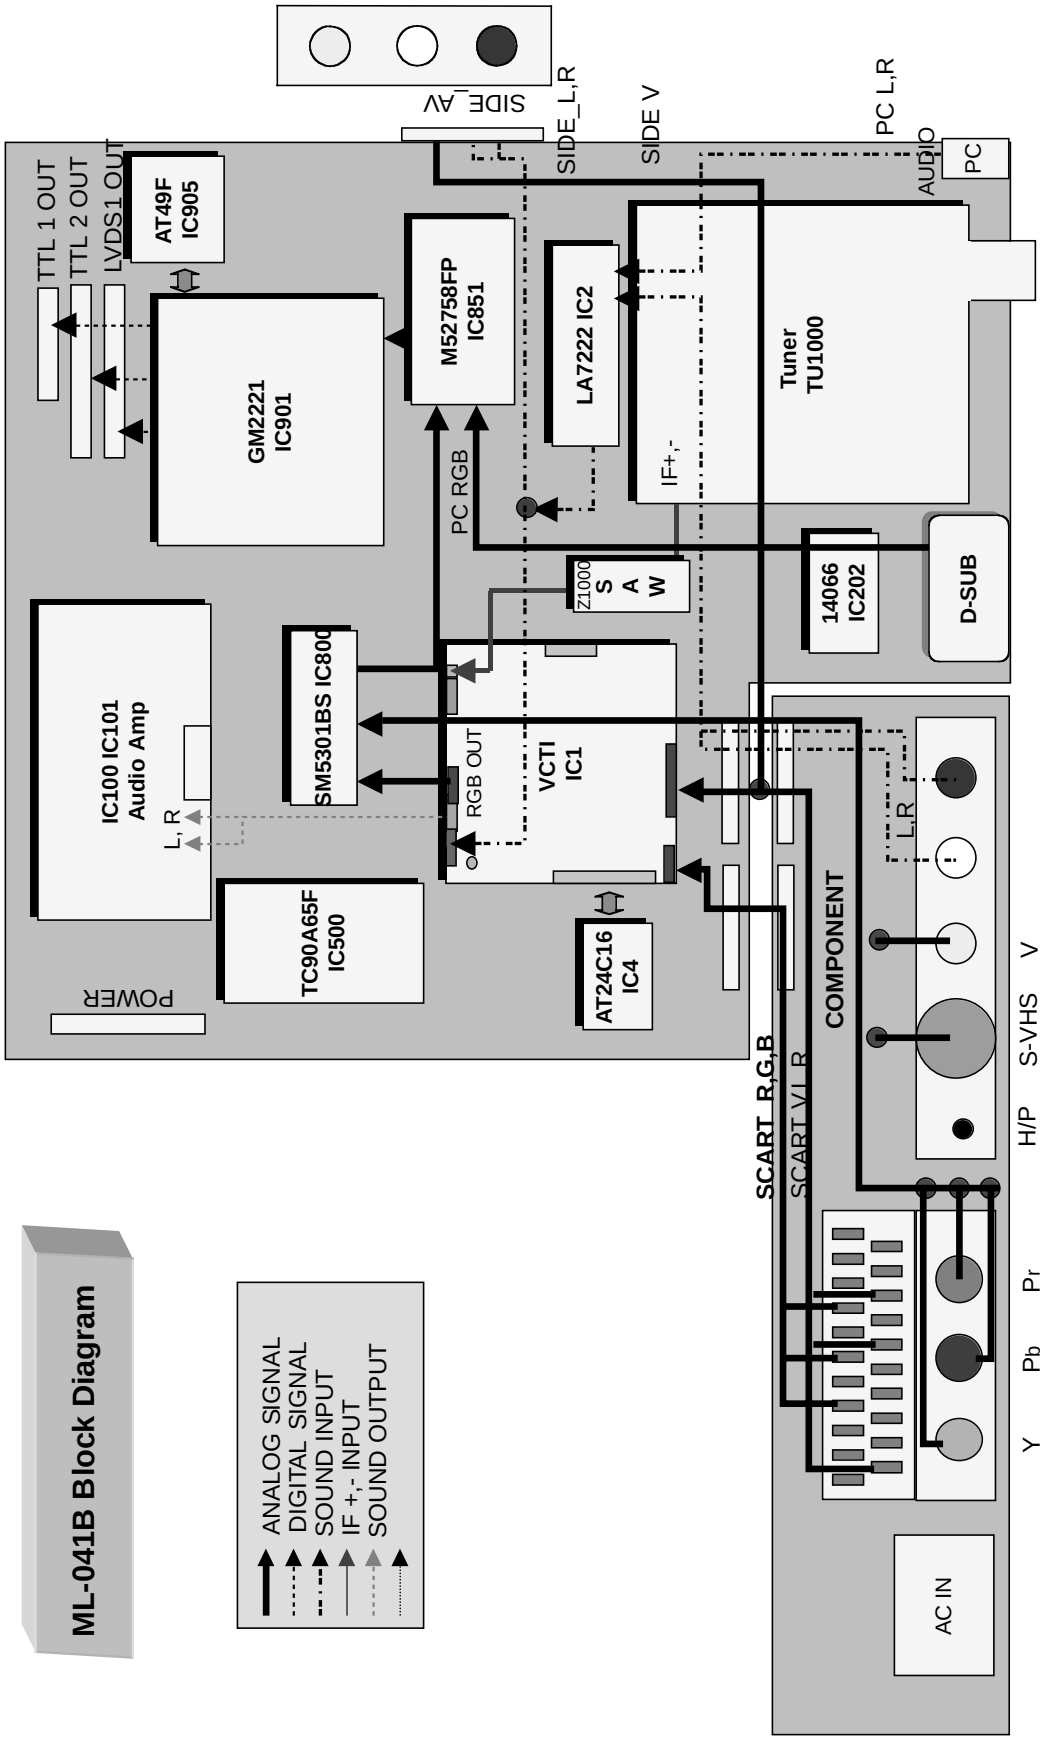

BLOCK DIAGRAM DESCRIPTION

1. Video Controller Unit & Display Data Conversion Unit

The video controller unit receives the video signals inputted through the tuner, AV port (AV1, AV2, S-Video, component), and converts them into an analog RGB signal through the microcomputer (VCTI) combined with the video decoder that integrates various functions in one chip.

Either the analog RGB, component YPbPr or PC RGB signal is selected by the switching IC and inputted to a scaler (GM2221), which is sent to the LCD module after being modified to an LVDS signal through the integrated LVDS IC.

Or, it is sent to the LCD module as a TTL output.

VCTi is the main microprocessor that handles video signal processing and sound signal processing. It also manages the RF signals received from the tuner.

The scaler can control timing to fit into the LCD panel, and can also control the size and position of the input signal.

2. Power Supply Unit

The power supply unit provides 15V and 5V DC power to the mainboard.

The PWM Step-Up DC/DC Converter circuit is used to generate the 33V used for the tuner.

15V power is directly used by the sound amplifier IC and is also used to generate 5V power through the regulator. 12V power is used for the LCD panel power, and 5V power is converted to 3.3V and 1.8V power through the regulator, which in turn supplies electrical power for ICs such as VCTI and scaler.

WIRING DIAGRAM

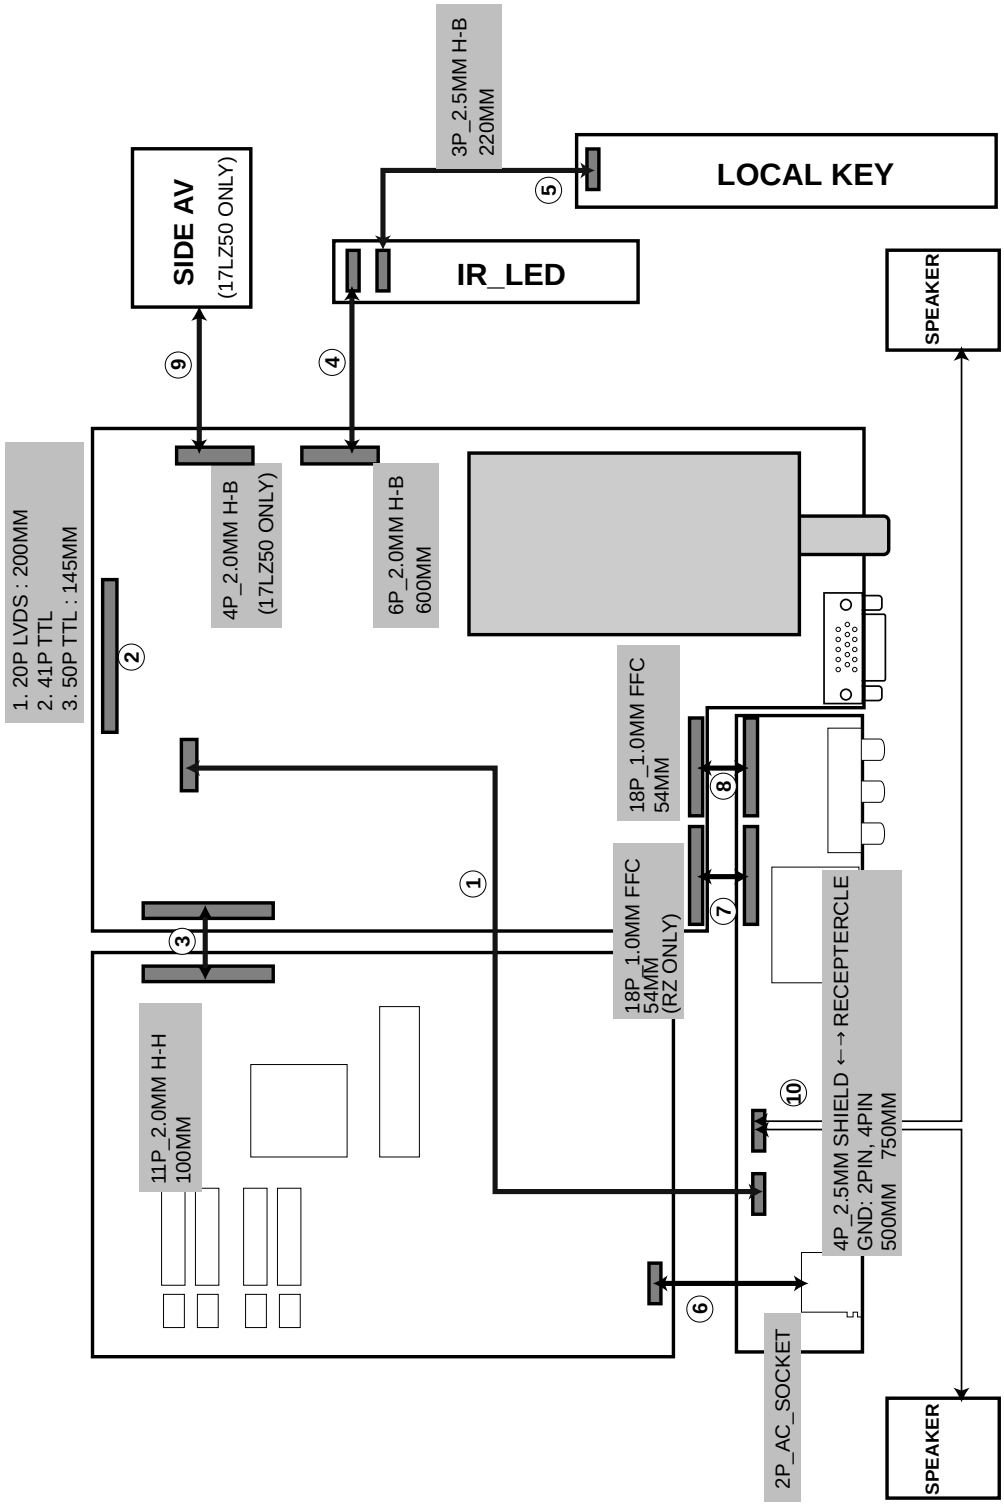

Wiring Part List

No.	Part No.
1	6631T25019Y
2	6631T11012R
3	6631T20028G
4	6631T20033S
5	6631T25021A
6	6620K00007C
7	6620T11017N
8	6620T11017N
9	6631T20033L
10	6631T25019L

EXPLODED VIEW

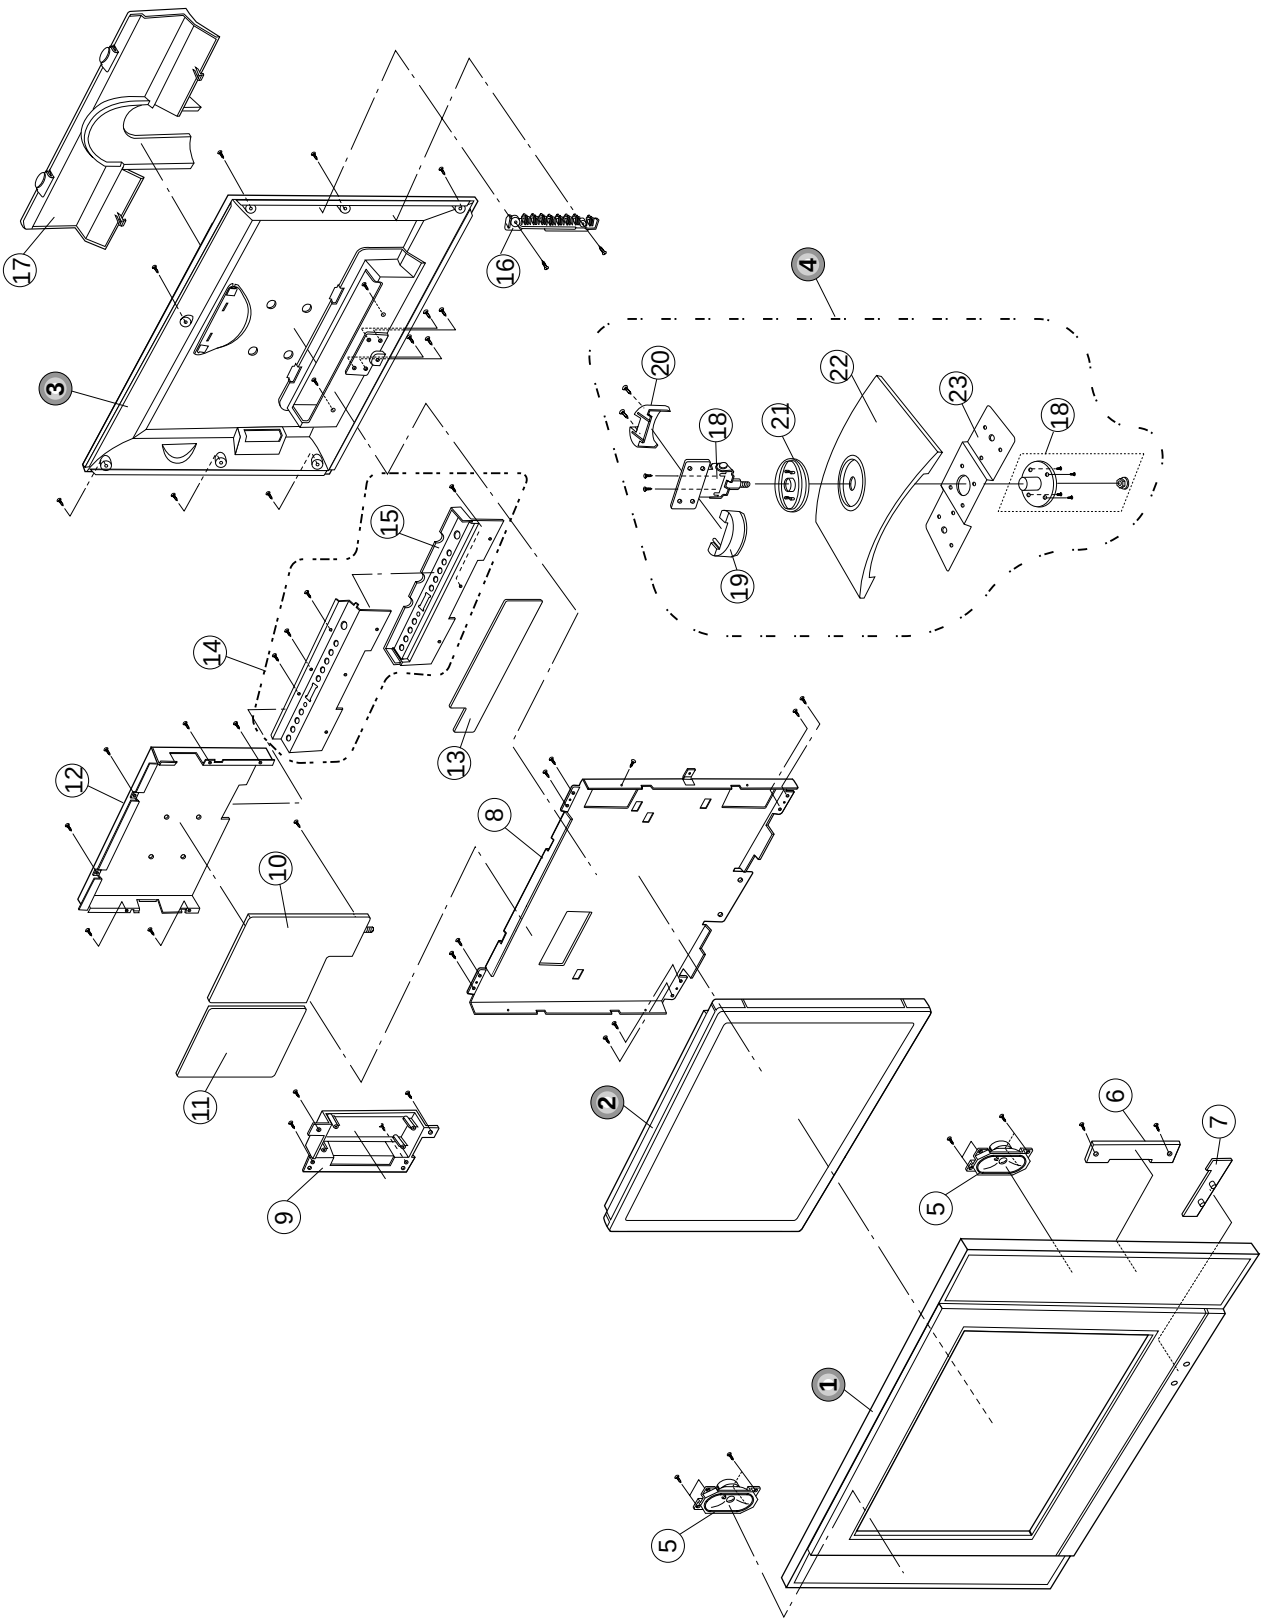

EXPLODED VIEW PARTS LIST

No.	PART NO.	DESCRIPTION
1	3091V00490M	CABINET ASSEMBLY RZ-15LA62 STEREO ML024G .
	3091TKB050B	CABINET ASSEMBLY RZ-15LA62 BRAND 3090V00444 C/SKD.
2	6306V15002A	LCD(LIQUID CRYSTAL DISPLAY), M150X3-L04 XGA **CHIMEI TFT COLOR**
	6304FLP133A	LCD(LIQUID CRYSTAL DISPLAY), LC150X02-A4 **LG PHILPS TFT COLOR** TN, XGA, 450NITS
	6304FBH009A	LCD(LIQUID CRYSTAL DISPLAY), HT15X01-D01(A) **BOE-HYDIS TFT COLOR** XGA, TN400NITS 25MS 4CCFL, A-GRADE
3	3809TKB029C	BACK COVER ASSEMBLY, RZ-15LA66 3808V00368 3850VC0002F
	3809TKB029H	BACK COVER ASSEMBLY, RZ-15LA66 ML-041B C/SKD
4	4811V00044C	BRACKET ASSEMBLY, STAND RZ-15LA60 ML012B .
	4811V00044F	BRACKET ASSEMBLY, STAND RZ-15LA60 ML012C C/SKD
5	6400GKTX01C	SPEAKER,FULLRANGE, F1527C-6428-4 K-TONE FULL-RANGE(GENERAL) 4 OHM 7/12W 85DB OTHERS 40*70MM TRACK TYPE
6	6871TST633A	PWB(PCB) ASSEMBLY,SUB, RM-15LA66 SUB TOTAL BRAND CONTROL BOARD
7	6871TST635A	PWB(PCB) ASSEMBLY,SUB, RM-15LA66 ML-041B SUB TOTAL BRAND IR B/D
8	4951TKS150F	METAL ASSEMBLY, FRAME MAIN 15LA66/70**(CMO MODULE)**
	4951TKS168A	METAL ASSEMBLY, FRAME MAIN 15LA66/70**(LPL MODULE ONLY)**
	4951TKS168B	METAL ASSEMBLY, FRAME MAIN C/SKD 15LA66/70 **LPL MODULE ONLY**
	4951TKS150E	METAL ASSEMBLY, FRAME MAIN 15LA66/70**(HYDIS MODULE)**
9	4810V00950B	BRACKET, AV RZ-20LA62 ML024A HIPS 60HR .
10	3313TP1024A	MAIN TOTAL ASSEMBLY, RZ-15LA70**(CMO)** BRAND ML-041B
	3313TP1023A	MAIN TOTAL ASSEMBLY, RZ-15LA70**(LPL)** BRAND ML-041B
	3313TP1016A	MAIN TOTAL ASSEMBLY, RZ-15LA70**(HYDIS)** BRAND ML-041B
11	6871TPT281A	PWB(PCB) ASSEMBLY, POWER, RZ-15LA70 POWER TOTAL POWERNET LIPS FOR CMO/LPL/HD
12	4950TKS300B	METAL, SHIELD 15LA66
	4950TKS300A	METAL, SHIELD 15LA66 C/SKD
13	6871TST727A	PWB(PCB) ASSEMBLY,SUB, RZ-15LA66 ML-041B SUB TOTAL BRAND SCARTJACK ASSY
	6871TST615A	PWB(PCB) ASSEMBLY,SUB, RZ-17LZ50 SUB TOTAL BRAND JACK(SCART) BOARD ASSY
14	3551TKK537C	COVER ASSEMBLY, RZ-15LA66 REAR A/V ML-041B
15	4810V00925G	BRACKET, REAR AV RZ-15LA66 ML024E HIPS 407AF 70B SPRAY
16	5020V00777B	BUTTON, CONTROL 15LA60 ABS, HF-380 7KEY .
17	3550V00298A	COVER, AV COVER 15LA60 NON REAR
18	4950V00157A	METAL, STAND NON HINGE ASSY_15LA60
19	4810V00777B	BRACKET, STAND 15LA60 NON ABS, HF-380 FRONT
20	4810V00778B	BRACKET, STAND 15LA60 NON ABS, HF-380 .
21	4810V00776B	BRACKET, DECO RZ-15LA60 NON ABS, HF-380 #102
22	4810V00779B	BRACKET, STAND RZ-15LA60 NON ABS, HF-380 .
23	4950V00135A	METAL, STAND NON BASE, 15LA60

REPLACEMENT PARTS LIST

For Capacitor & Resistors, the charactors at 2nd and 3rd digit in the P/No. means as follows;	CC, CX, CK, CN, CH : Ceramic CQ : Polyestor CE : Electrolytic CF : Fixed Film	RD : Carbon Film RS : Metal Oxide Film RN : Metal Film RH : CHIP, Metal Glazed(Chip) RR : Drawing

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		MAIN BOARD		
		CAPACITOR		
		C1	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1008	0CE227CF638	"220UF SHL,SD 16V M FM5 TP 5"
		C1101	0CE227BH638	220U KME 25V M FM5 TP5
		C1104	0CE227BH638	220U KME 25V M FM5 TP5
		C1107	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C1140	0CE227BH638	220U KME 25V M FM5 TP5
		C1152	0CE107BK638	100UF KME 50V M FM5 TP5
		C123	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C124	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C131	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C132	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C133	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C134	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C1150	0CH3105F946	1UF 16V Z F 2012 R/TP
		C1151	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C127	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C128	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C135	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C136	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C15	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C16	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C19	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C203	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C4	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C41	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C44	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C49	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C6	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C803	0CH3105F946	1UF 16V Z F 2012 R/TP
		C804	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C808	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C810	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C812	0CH3105F946	1UF 16V Z F 2012 R/TP
		C851	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C854	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C855	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C858	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C863	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C866	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C867	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C869	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C871	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C874	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C877	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C909	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C910	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C917	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C920	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C925	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C926	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C927	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C928	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C929	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C930	0CH3104K946	100000PF 50V Z F 2012 R/TP

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C934	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C935	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C936	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C937	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C938	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C939	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C940	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C943	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C944	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C945	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C946	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C947	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C948	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C949	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C950	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C956	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C964	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C965	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C967	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C968	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C970	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C13	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C14	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C2	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C20	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C21	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C46	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C50	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C59	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C7	0CH6221K416	220PF 50V J NP0 2012 R/TP
		C8	0CH6221K416	220PF 50V J NP0 2012 R/TP
		C9	0CH6221K416	220PF 50V J NP0 2012 R/TP
		C923	0CH6050K116	5PF 50V D NP0 2012 R/TP
		C924	0CH6050K116	5PF 50V D NP0 2012 R/TP
		C129	181-007F	"MPE ECQ-V1H224JL3(TR), 50V 0"
		C130	181-007F	"MPE ECQ-V1H224JL3(TR), 50V 0"
		C1001	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C1002	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C1003	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1004	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C1007	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1010	0CK273DK51A	27000PF 2012 50V 10% B(Y5P)
		C1015	0CH5390K416	39PF 50V 5% NP0 2012 R/TP
		C1016	0CH5390K416	39PF 50V 5% NP0 2012 R/TP
		C107	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C109	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C11	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C110	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C113	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C114	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C115	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C116	0CK562CK51A	5600PF 1608 50V 10% R/TP B(Y
		C117	0CK562CK51A	5600PF 1608 50V 10% R/TP B(Y
		C118	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C12	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C125	0CK105EK56A	1UF 3216 50V 10% X7R R/TP
		C126	0CK105EK56A	1UF 3216 50V 10% X7R R/TP
		C200	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C22	0CK822CK56A	8200PF 1608 50V 10% X7R R/TP
		C23	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C24	0CK822CK56A	8200PF 1608 50V 10% X7R R/TP
		C25	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C26	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C27	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C28	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C29	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C3	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C30	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C31	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C32	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C33	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C34	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C35	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C37	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C40	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C42	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C45	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C52	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C67	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C75	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C800	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C801	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C802	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C807	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C811	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C816	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C82	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C861	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C865	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C875	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C900	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C901	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C902	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C903	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C904	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C905	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C906	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C911	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C912	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C913	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C914	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C915	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C916	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C918	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C919	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C921	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C922	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C961	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C121	0CC100CK41A	10PF 1608 50V 5% R/TP NP0
		C122	0CC100CK41A	10PF 1608 50V 5% R/TP NP0
		C43	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C47	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C48	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C53	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C56	0CC221CK41A	220PF 1608 50V 5% R/TP NP0
		C57	0CC221CK41A	220PF 1608 50V 5% R/TP NP0

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C58	0CC221CK41A	220PF 1608 50V 5% R/TP NP0
		C74	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C83	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C85	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C86	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C88	0CC390CK41A	39PF 1608 50V 5% R/TP NP0
		C89	0CC390CK41A	39PF 1608 50V 5% R/TP NP0
		C108	0CE476VH6DC	47UF MV 25V 20% R/TP(SMD) SM
		C1102	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1103	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1105	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C1106	0CE477BD618	470UF KME TYPE 10V 20% FL TP
		C1109	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C111	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C1118	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C112	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C1124	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1130	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1132	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1134	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD)
		C1135	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1137	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1149	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C119	0CH8106F691	10UF 16V 20% 105STD (CYL) R/
		C120	0CH8106F691	10UF 16V 20% 105STD (CYL) R/
		C17	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C5	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C55	0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S
		C60	0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S
		C61	0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S
		C62	0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S
		C852	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C856	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C859	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C864	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C868	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C87	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C873	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C876	0CH8106F691	10UF 16V 20% 105STD (CYL) R/
		C888	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		DIODEs		
		D100	0DRFC00288A	SS14 FAIR CHILD R/TP SMA 20-
		D101	0DRFC00288A	SS14 FAIR CHILD R/TP SMA 20-
		D102	0DS181009AA	KDS181 TP KEC SOT-23 80V 3
		D103	0DS181009AA	KDS181 TP KEC SOT-23 80V 3
		D107	0DS226009AA	KDS226 TP KEC SOT-23 80V 30
		D1150	0DRGS00199A	UF4001 GENERAL SEMICONDUCTOR
		D1151	0DZ330009DF	MTZJ33B TP ROHM-K DO34 0.5W
		ZD104	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD105	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD200	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD201	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD202	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD203	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD204	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD205	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD206	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD207	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD208	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD209	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		ZD211	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		IC		
		IC905	0IZZTSA005A	ML-041B XGA PAL ATMEL 32P PL
		IC3	0IKE702700D	"KIA7027AF 3, SOT-89 TP RESET"
		IC2	0ISA722200A	LA7222 (1280 AUDIO) - - - -
		IC200	0IMMRSG036A	"M24C02-WMN6T SGS-THOMSON 8P,"
		IC4	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P
		IC903	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P
		IC100	0IMCRMZ002A	MP7720 MONOLITHIC POWER SYST
		IC101	0IMCRMZ002A	MP7720 MONOLITHIC POWER SYST
		IC851	0IMCRMI006A	"M52758FP MITSUBISHI 36PIN, R"
		IC202	0IMO140662A	"MC14066BDR2 14P,SOIC TP BILA"
		IC1	0IPRPMN003C	VCT49XYF C7(NTSC+PAL) MICRON
		IC800	0IPRPNP001A	"SM5301BS(ATSC DTV) NPC 28P,H"
		IC901	0IPRPGN015A	"GM2221 GENESIS 208P,QFP TRAY"
		IC1101	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1103	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,"
		IC1105	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1106	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,"
		IC1108	0IMCRKE010A	KIA7812AF KEC 2P DPACK R/TP
		IC1109	0IPMGFA061A	KIA7812AF KEC 2P DPACK R/TP
		IC1111	0IMCRFA015A	FAN1587AD33X FAIRCHILD 3P**(CHIMEI)**
		IC1114	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1115	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1110	0ISS780800J	"KA78M08R 3P,D-PAK TP VOL. RE"
		IC1113	0ISS780800J	"KA78M08R 3P,D-PAK TP VOL. RE"
		IC905	6620F00017A	CCSD-32T-SM WOOYOUNG 32P PLC
		COIL & CORE & INDUCTOR		
		L104	6140TBZ045A	"38.5UH(DIP), 6A, P7.5, DR8.3"
		L105	6140TBZ045A	"38.5UH(DIP), 6A, P7.5, DR8.3"
		L1150	150-985B	DR8*11 2.4MH 0.16MM 270.5T
		L1100	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1101	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1102	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1103	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1104	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1105	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1106	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1107	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L200	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L201	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L202	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L203	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L204	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L205	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L800	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L853	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L900	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L901	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L902	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L903	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L904	6210TCE001G	HH-1M3216-501 CERATEC 3216M**(CHIMEI)**
		L905	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L906	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L907	6210TCE001G	HH-1M3216-501 CERATEC 3216MM**(HYDIS, LPL)**
		L10	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L1001	0LC1020101A	1UH 10% 2012 R/TC FI-B2012-1
		L1002	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L15	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		L2	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L8	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		FET & TRANSISTOR		
		IC1107	0TF492509AA	SI4925DY TP TEMIC 30V 6.1A
		IC1104	0TFVI80005A	VISHAY SI4963DY R/TP SO-8 -2
		IC902	0TFVI80005A	VISHAY SI4963DY R/TP SO-8 -2
		Q1	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q100	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q1000	0TR388109AA	KTC3881 CHIP TP KEC - -
		Q101	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q1100	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q1150	0TR322809AB	KTC3228-Y(KTC2383) TP KEC TO
		Q1151	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q12	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q13	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q14	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q15	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q2	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q3	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q603	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		RESISTORs		
		C931	0RH0000D622	0 1/10W P-TYPE TAPPING
		C932	0RH0000D622	0 1/10W P-TYPE TAPPING**(HYDIS, LPL)**
		C933	0RH0000D622	0 1/10W P-TYPE TAPPING**(CHIMEI TFT)**
		R1004	0RH3000D622	300 1/10W 5 D.R/TP
		R1010	0RH7501D622	7.5K 1/10W 5 D.R/TP
		R1011	0RH0000D622	0 1/10W P-TYPE TAPPING
		R1012	0RH7502D622	75K 1/10W 5 D.R/TP
		R106	0RH1500D622	150 1/10W 5 D.R/TP
		R107	0RH1003D622	100K 1/10W 5 D.R/TP
		R1149	0RH2200D622	220 1/10W 5 D.R/TP
		R1151	0RH4700D622	470 1/10W 5 D.R/TP
		R1153	0RH1000D622	100 1/10W 5 D.R/TP
		R126	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R132	0RH1003D622	100K 1/10W 5 D.R/TP
		R133	0RH1003D622	100K 1/10W 5 D.R/TP
		R134	0RH1003D622	100K 1/10W 5 D.R/TP
		R135	0RH1003D622	100K 1/10W 5 D.R/TP
		R136	0RH8202D622	82K 1/10W 5 D.R/TP
		R137	0RH8202D622	82K 1/10W 5 D.R/TP
		R14	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R140	0RH0392D622	39 1/10W 5 D.R/TP
		R141	0RH0392D622	39 1/10W 5 D.R/TP
		R142	0RH0392D622	39 1/10W 5 D.R/TP
		R143	0RH0392D622	39 1/10W 5 D.R/TP
		R144	0RH0392D622	39 1/10W 5 D.R/TP
		R145	0RH0392D622	39 1/10W 5 D.R/TP
		R146	0RH0392D622	39 1/10W 5 D.R/TP
		R147	0RH0392D622	39 1/10W 5 D.R/TP
		R201	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R204	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R211	0RH0752D622	75 1/10W 5 D.R/TP
		R212	0RH0752D622	75 1/10W 5 D.R/TP
		R213	0RH0752D622	75 1/10W 5 D.R/TP
		R214	0RH4703D622	470K 1/10W 5 D.R/TP
		R215	0RH8201D622	8.2K 1/10W 5 D.R/TP
		R216	0RH8201D622	8.2K 1/10W 5 D.R/TP
		R217	0RH4703D622	470K 1/10W 5 D.R/TP

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R36	0RH0000D622	0 1/10W P-TYPE TAPPING
		R57	0RH1000D622	100 1/10W 5 D.R/TP
		R59	0RH1201D622	1.2K 1/10W 5 D.R/TP
		R6	0RH4702D622	47K 1/10W 5 D.R/TP
		R817	0RH0000D622	0 1/10W P-TYPE TAPPING
		R818	0RH8200D622	820 1/10W 5 D.R/TP
		R9	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R903	0RH0000D622	0 1/10W P-TYPE TAPPING**(LPL, HYDIS)**
		R908	0RH0822D622	82 1/10W 5 D.R/TP
		R910	0RH0822D622	82 1/10W 5 D.R/TP
		R915	0RH3600D622	CHIP 360-J 1/10 W
		R934	0RH1000D622	100 1/10W 5 D.R/TP
		R961	0RH0000D622	0 1/10W P-TYPE TAPPING
		R985	0RH0000D622	0 1/10W P-TYPE TAPPING
		R989	0RH8200D622	820 1/10W 5 D.R/TP
		R994	0RH0000D622	0 1/10W P-TYPE TAPPING**(CHIMEI TFT)**
		R995	0RH0000D622	0 1/10W P-TYPE TAPPING**(HYDIS, LPL)**
		C995	0RH0000D622	0 1/10W P-TYPE TAPPING**(CHIMEI TFT)**
		R999	0RH1000D622	100 1/10W 5 D.R/TP
		R1	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R10	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R1001	0RJ0562D677	56 OHM 1/10 W 5% 1608 R/TP
		R1002	0RH1501D622	1.5K OHM 1 / 10 W 2012 5.00%
		R1003	0RJ8200D677	820 OHM 1/10 W 5% 1608 R/TP
		R1005	0RJ0682D677	68 OHM 1/10 W 5% 1608 R/TP
		R1014	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R11	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R1105	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R1106	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R1107	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R1150	0RJ0102D677	10 OHM 1/10 W 5% 1608 R/TP
		R1152	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R12	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R124	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R125	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R127	0RJ2701D677	2.7K OHM 1/10 W 5% 1608 R/TP
		R128	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R129	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R13	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R130	0RJ1202D677	12K OHM 1/10 W 5% 1608 R/TP
		R131	0RJ1202D677	12K OHM 1/10 W 5% 1608 R/TP
		R138	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R139	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R15	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R16	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP
		R17	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R18	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP
		R19	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R2	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R20	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP
		R202	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R203	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R205	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R206	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R207	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R208	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R209	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R21	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R210	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R22	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R220	0RJ7502D677	75K OHM 1/10 W 5% 1608 R/TP
		R221	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R224	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R225	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R226	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R23	0RJ2701D677	2.7K OHM 1/10 W 5% 1608 R/TP
		R230	0RJ7502D677	75K OHM 1/10 W 5% 1608 R/TP
		R24	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R240	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R25	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R28	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R29	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R3	0RJ4700D677	470 OHM 1/10 W 5% 1608 R/TP
		R34	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R37	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R4	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R41	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R45	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R46	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R49	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R5	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R50	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R51	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R52	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R53	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R54	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R55	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R56	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R58	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R60	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R62	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R64	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R66	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R68	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R69	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R70	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R72	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R73	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R74	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R75	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R76	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R77	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R78	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R80	0RJ2202D677	22K OHM 1/10 W 5% 1608 R/TP
		R822	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R835	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R838	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R901	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R902	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R904	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R907	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R909	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R911	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R912	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R913	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R914	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R917	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R928	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R929	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R930	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R931	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R932	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R935	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R936	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R938	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R939	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R941	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R942	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R943	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R944	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R945	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R946	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R947	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R953	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R954	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R96	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R964	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R979	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R980	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R981	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R982	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R983	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R984	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R991	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R992	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
	OTHERs			
		TU1000	6700VS0003A	TAEW-G051D LG INOTEK MULTI V
		JA201	6612VCH003B	PEJ012C PARK ELEC H=6.5 STER
		X11	6202VDT002E	SX-1SMD SUNNY RADIAL 2025000
		X900	6202VDT002B	SX-1 SUNNY SC14.3MHZ +/- 30
		Z1000	6200QL3002F	"X6966M EPCOS ST SIP5K, 6200Q"
	CONTROL BOARD			
		R2200	0RN1101F409	1.10K 1/6W 1% TA52
		R2201	0RN8200F409	820 1/6W 1% TA52
		R2202	0RN5600F409	560 1/6W 1% TA52
		R2203	0RN4700F409	470 1/6W 1 TA52
		R2204	0RN3900F409	390 1/6W 1% TA52
		R2205	0RN3300F409	330 1/6W 1% TA52
		R2206	0RN2700F409	270 1/6W 1% TA52
		R2207	0RN3301F409	3.30K 1/6W 1% TA52
		R2208	0RN2000F409	200 1/6W 1% TA52
		SW2200	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2201	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2202	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2203	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2204	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2205	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2206	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2207	140-313A	TACT 2LEAD 100G(TA) LG C&D N
	IR BOARD			
		C2101	0CH3104K566	0.1UF 50V 10% X7R 2012 R/TP
		L2101	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		Q2101	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q2102	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q2103	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		R2101	0RH1000D622	100 1/10W 5 D.R/TP
		R2102	0RH1000D622	100 1/10W 5 D.R/TP
		R2103	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R2104	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R2105	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D

DATE: 2004. 06.03.

*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R2106	0RH1000D622	100 1/10W 5 D.R/TP
		R2111	0RH4301D622	4.3K 1/10W 5 TA
		LED1	0DL200000CA	SAM5670(DL-2LRG) BK Y-GREEN
		PA1101	6726TV0001A	TSOP4838SO1 VISHAY 38.0KHZ H
	JACK BOARD			
		C1215	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1216	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1221	0CH6331K416	330PF 50V J NP0 2012 R/TP
		C1223	0CH6471K416	470F 50V J NP0 2012 R/TP
		C1224	0CH6471K416	470F 50V J NP0 2012 R/TP
		L1200	0RH0752D622	75 1/10W 5 D.R/TP
		L1202	0RH0000D622	0 1/10W P-TYPE TAPPING
		L1203	0RH0000D622	0 1/10W P-TYPE TAPPING
		L1206	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1207	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1208	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1211	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1212	0LC0233002A	3.3UH CERATECH R/TP
		L1213	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1214	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1215	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		R1201	0RH0000D622	0 1/10W P-TYPE TAPPING
		R1202	0RH0752D622	75 1/10W 5 D.R/TP
		R1217	0RH0752D622	75 1/10W 5 D.R/TP
		R1218	0RH0752D622	75 1/10W 5 D.R/TP
		R1219	0RH0752D622	75 1/10W 5 D.R/TP
		R1220	0RH0752D622	75 1/10W 5 D.R/TP
		R1224	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R1225	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R1230	0RH0752D622	75 1/10W 5 D.R/TP
		R1231	0RH0752D622	75 1/10W 5 D.R/TP
		R1232	0RH5101D622	5.1K 1/10W 5 D.R/TP
		R1233	0RH4703D622	470K 1/10W 5 D.R/TP
		R1234	0RH5101D622	5.1K 1/10W 5 D.R/TP
		R1235	0RH4703D622	470K 1/10W 5 D.R/TP
		ZD1200	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1206	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1207	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1212	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1213	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1214	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		JA1200	6612VJH008D	PJ6063D PARKELEC DVD IN 3P G
		JA1201	6613V00008F	PMJ014F PARK ELEC E/P(ST)+S-
		P1205	6620K00007C	"ISHENG,7007,M.MOUSE,60MM,YH3"
		C1217	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C1218	0CH6331K416	330PF 50V J NP0 2012 R/TP
		C1219	0CH6331K416	330PF 50V J NP0 2012 R/TP
		C1220	0CH6331K416	330PF 50V J NP0 2012 R/TP
		L1209	0LC0233002A	3.3UH CERATECH R/TP
		L1210	0LC0233002A	3.3UH CERATECH R/TP
		R1226	0RH0472D622	47 1/10W 5 D.R/TP
		R1227	0RH0752D622	75 1/10W 5 D.R/TP
		R1228	0RH0752D622	75 1/10W 5 D.R/TP
		R1229	0RH0752D622	75 1/10W 5 D.R/TP
		ZD1210	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1211	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20

IC1
VCT49xyF

IC2
(PC & M)LA7222

IC4
AT24C16

TUNER
(SAW FILTER)
TU1000
TUNER LEG + GND

VIDEO OUT BUFFER

P2
18P_1MM_FFC

P3
(PAL)18P_1MM_FFC

IC800
SM5301BS

IC851
(PC)M52758FP

IC500
(M)TC90A65F
I2C ADDR : W:B2H / R:B3H

IC901
gm5221

P902
(LPL_15)21P_LVDS

P904
(CMO_20)50P_TTL

P901
(LPL_20)41P_TTL

IC902
ST485

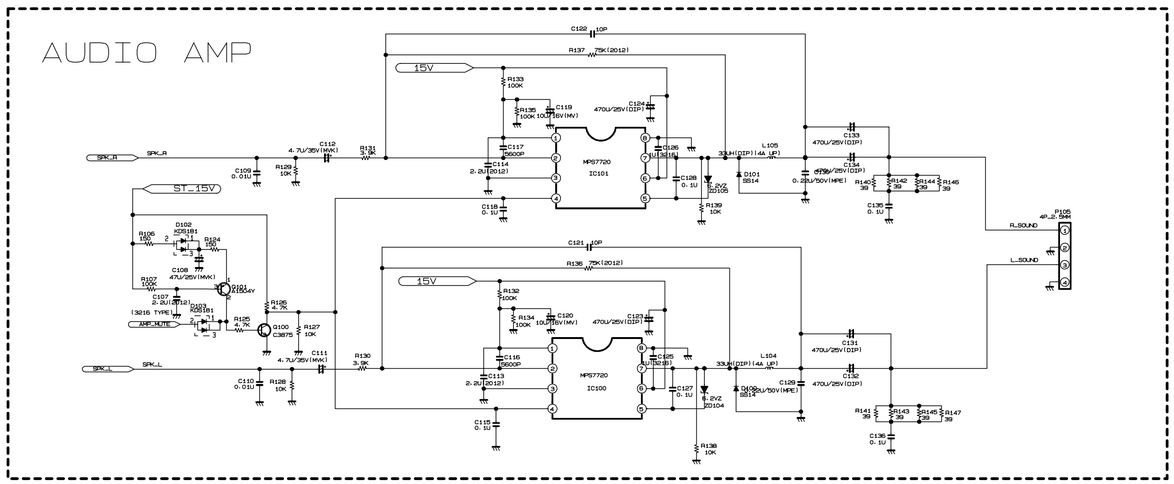

ML041B_3DR.cam.cir/005.sht

SCALE	UNIT	Date	TITLE
	mm		
DSGD.	CHKD.	APPD.	
		04/03/21	18:53:21
LG전자		DWG NO.	

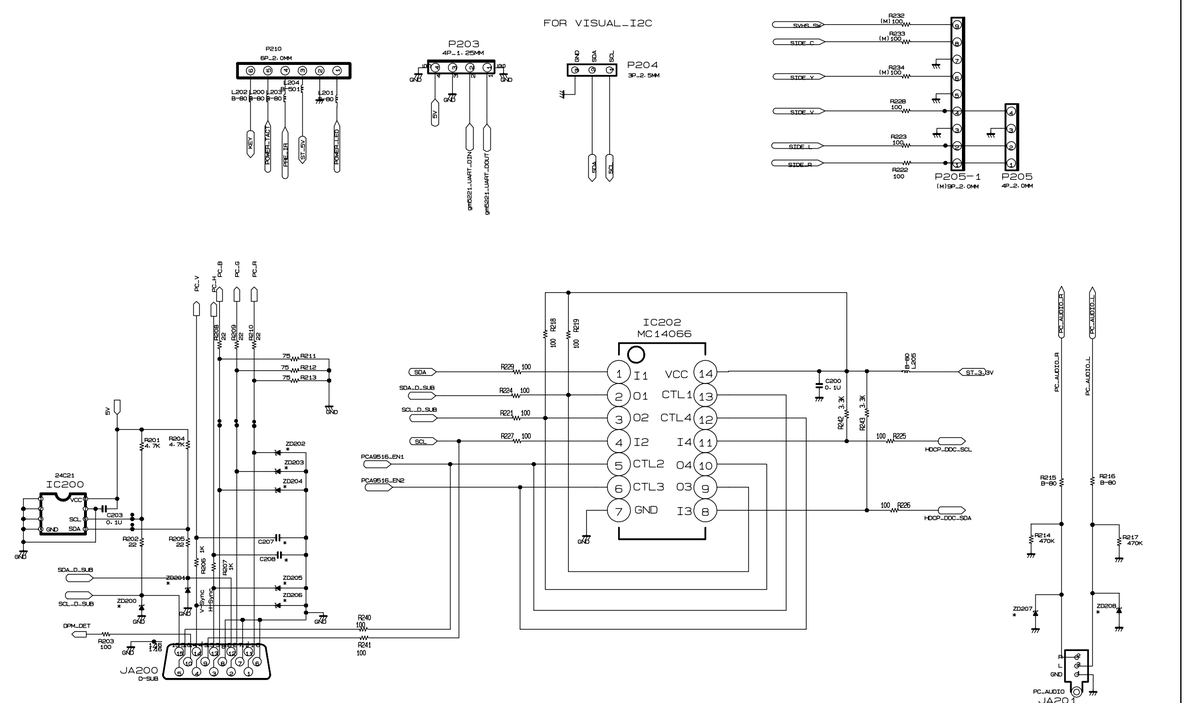

ML041B_3DR.cam.cir/006.sht

SCALE	UNIT	Date	TITLE
	mm		
DSGD.	CHKD.	APPD.	
		04/03/21	18:53:23
LG전자		DWG NO.	

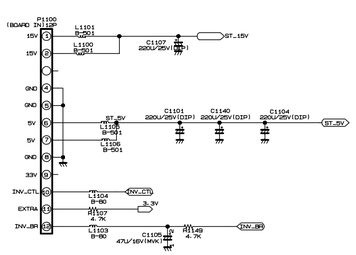

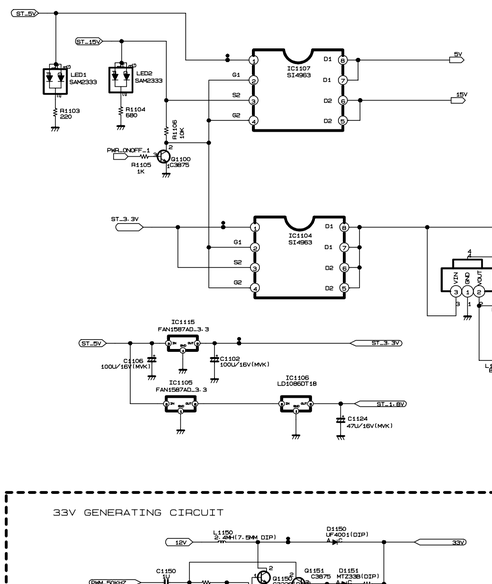

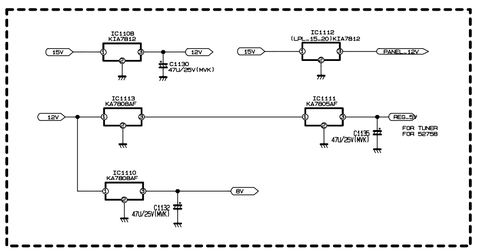

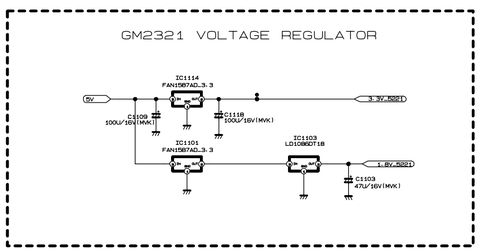

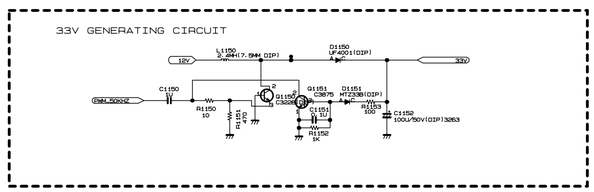

ML041B_3DR.cam.cir/007.sht

SCALE	UNIT	Date	TITLE
	mm		
DSGD.	CHKD.	APPD.	
		04/03/21	18:53:24
LG전자		DWG NO.	

#AV BOARD#

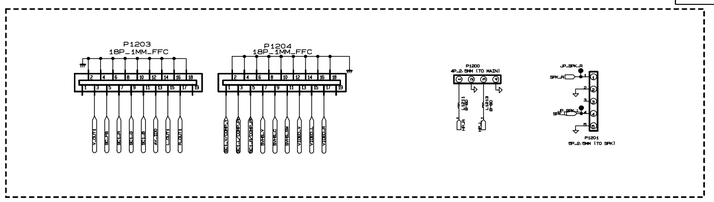

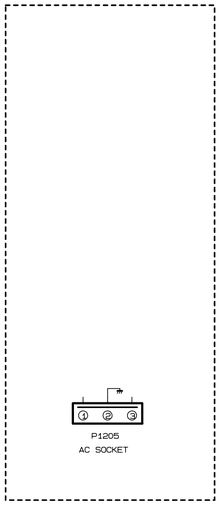

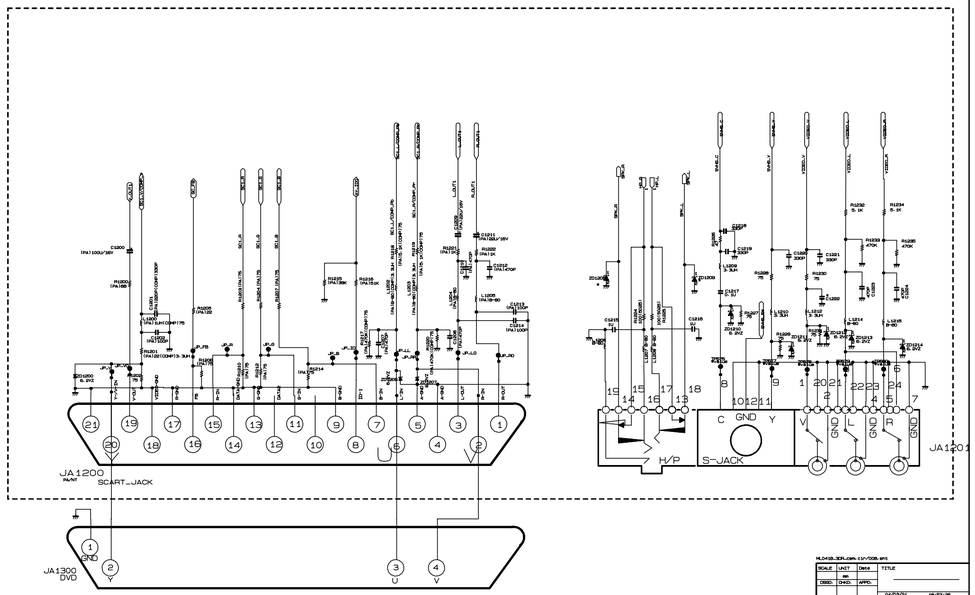

ML041B_3DR.cam.cir/008.sht

SCALE	UNIT	Date	TITLE
	mm		
DSGD.	CHKD.	APPD.	
		04/03/21	18:53:26
LG전자		DWG NO.	

P/NO : 3828TSL103D

Jun., 2004
Printed in Korea